
### Kitchan Island Cart

Assembly Instructions - Please keep for future reference N707P195395

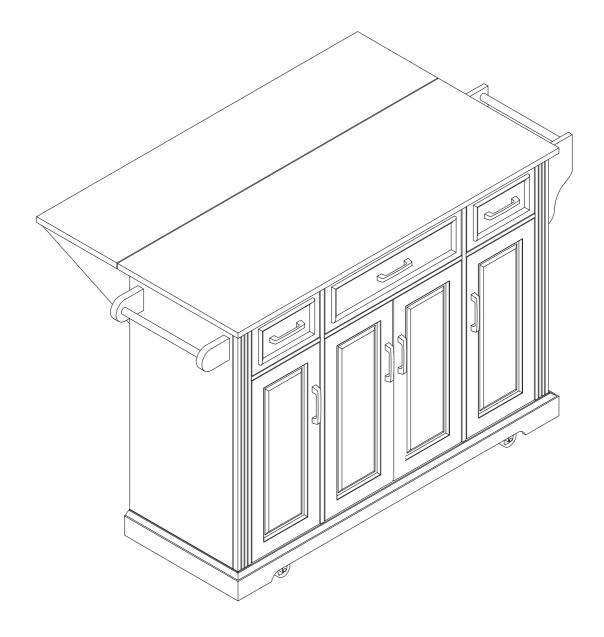

Important - Please read these instructions fully before starting assembly



### Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
   Take to your local authority waste disposal centre.

#### **Handy Hints**

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

# WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-


Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

## Components - Fittings

#### Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

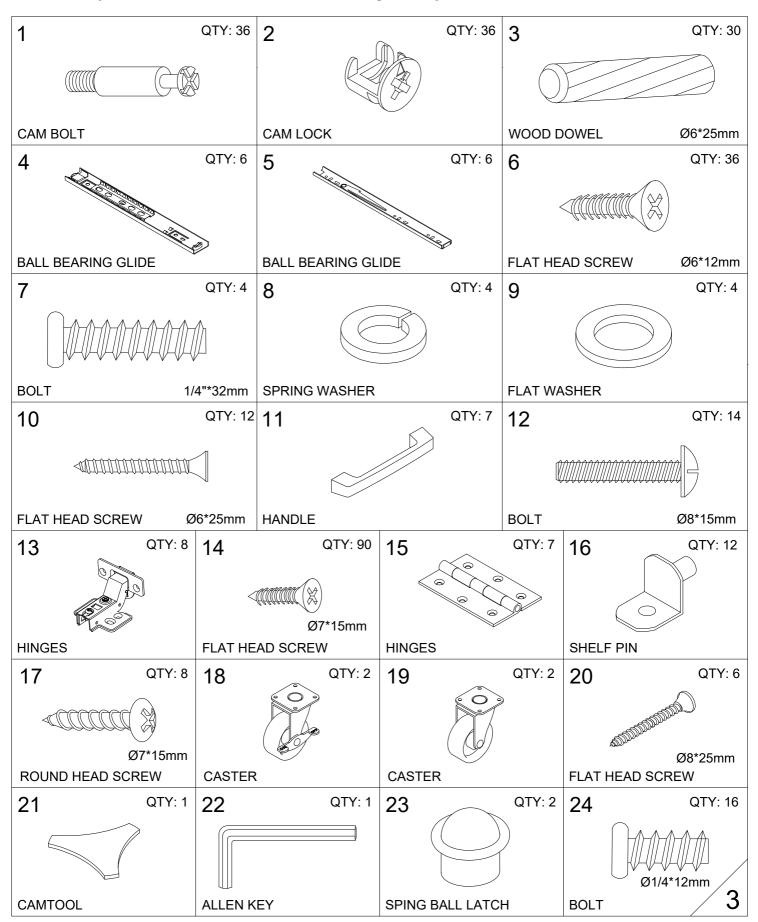

### **Using Camlocks**


#### Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

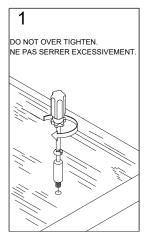

#### Step 2


Push the male camlock into the entry hole.

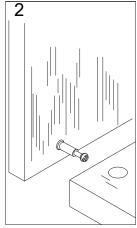

#### Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

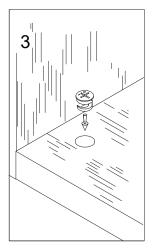


#### Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

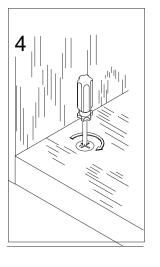


#### Slides Must Be Separated Before Assembly. After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje. Después de la separación,déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage. Après la séparation,mettez de cŏté jusqu'au moment de l'assemblage.

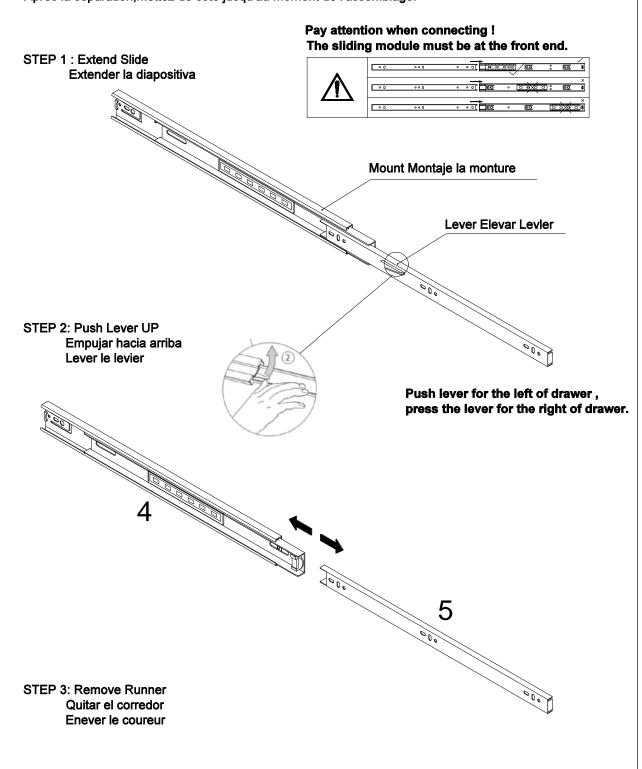



#### **Tool required**

 



Phillips screw driver (medium & large)

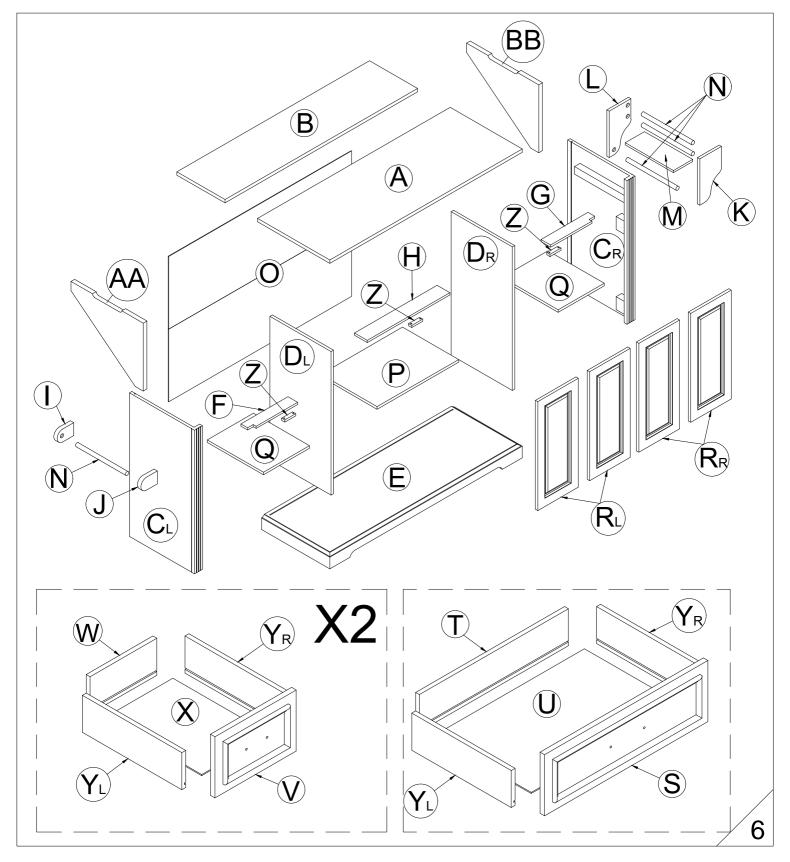


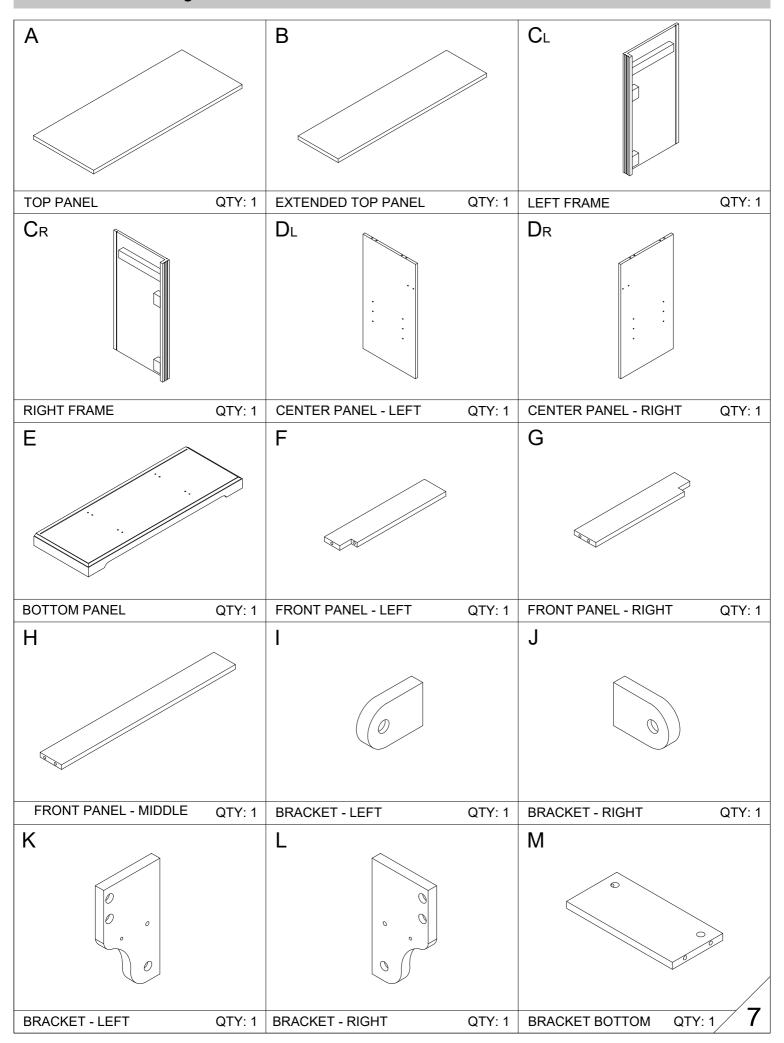

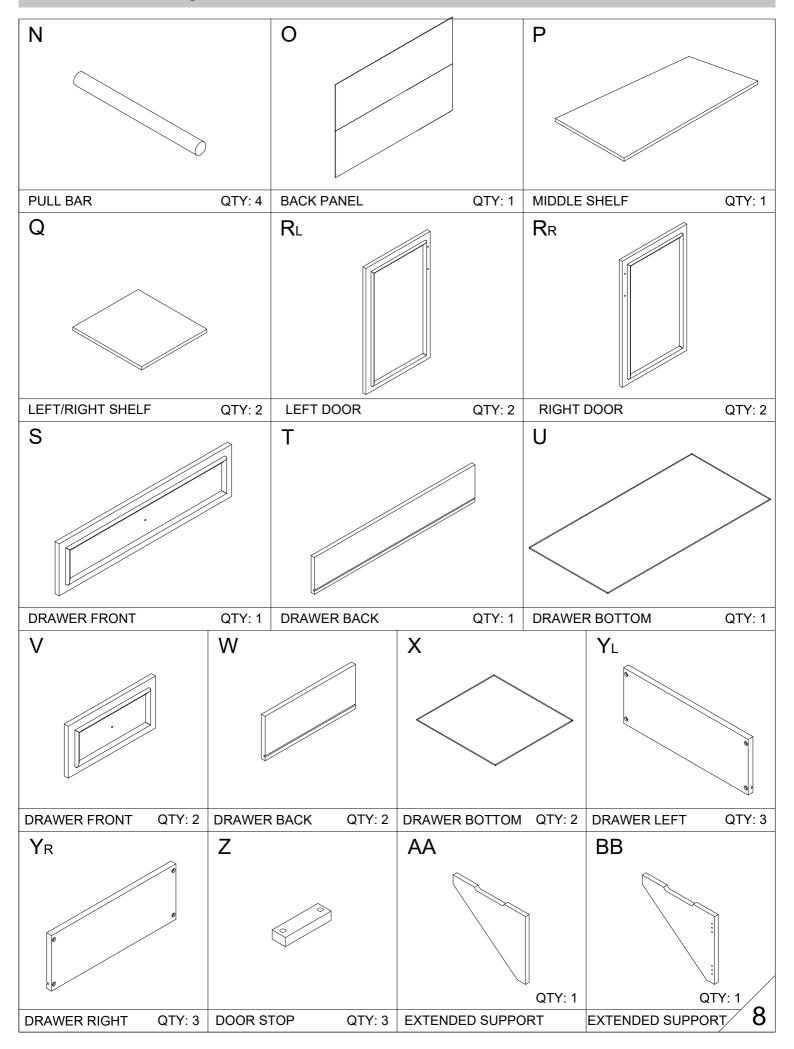

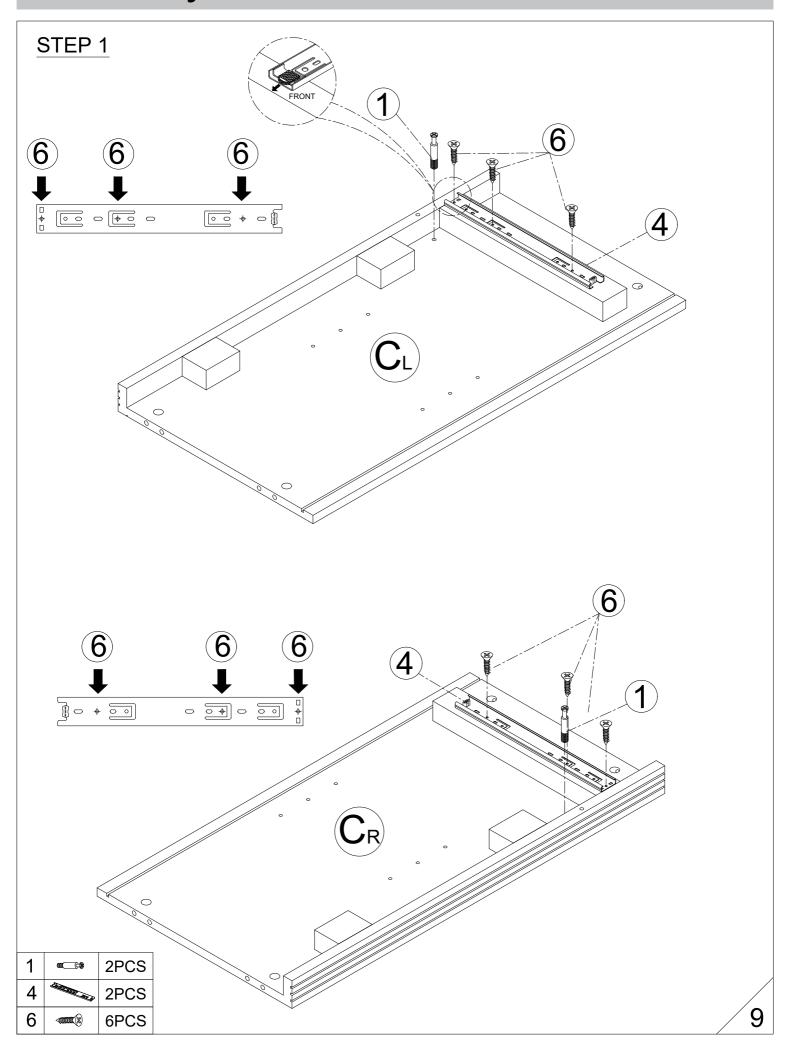

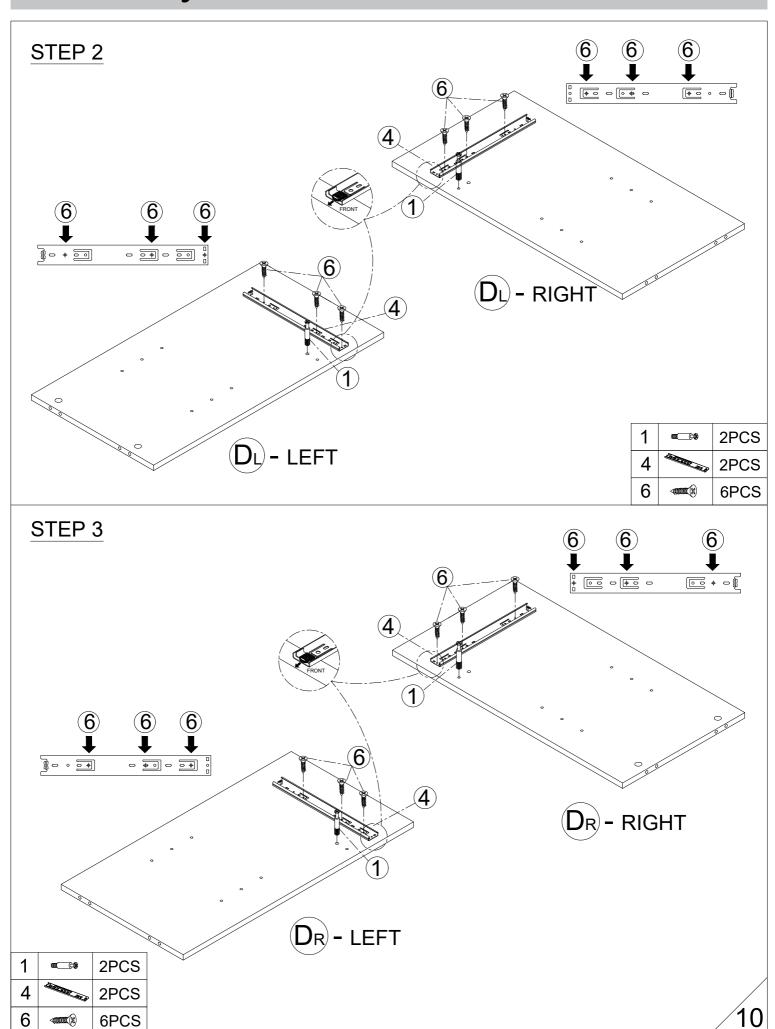

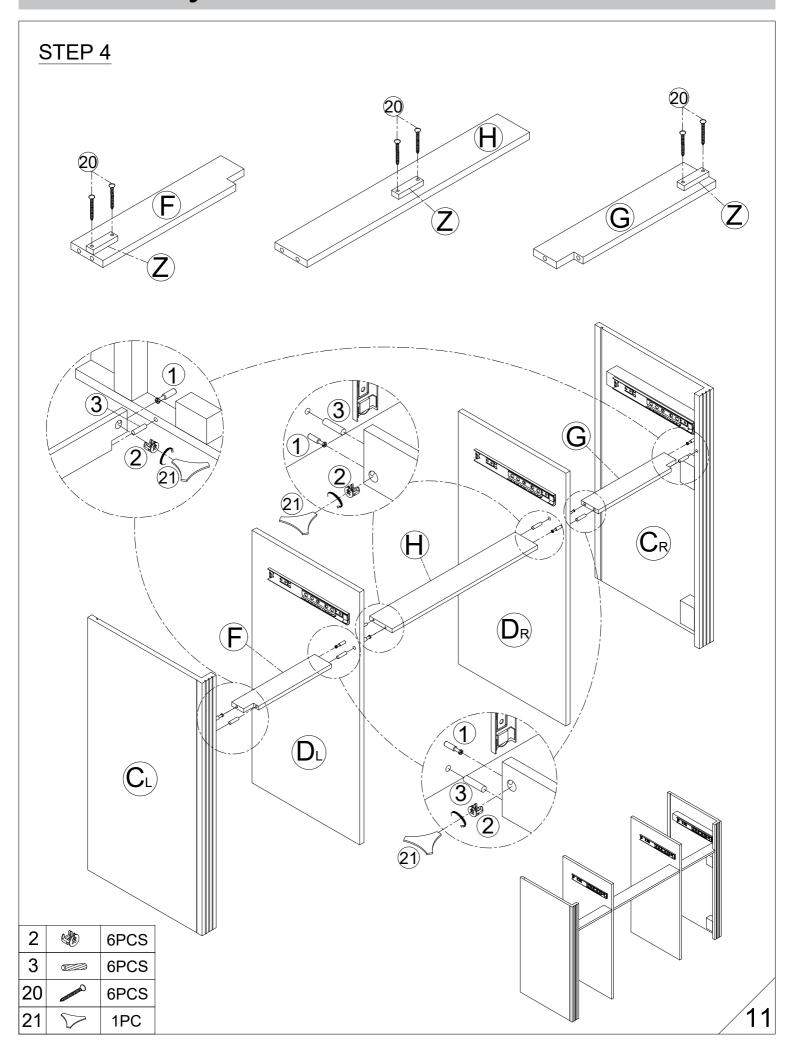


2

21

8PCS

1PC

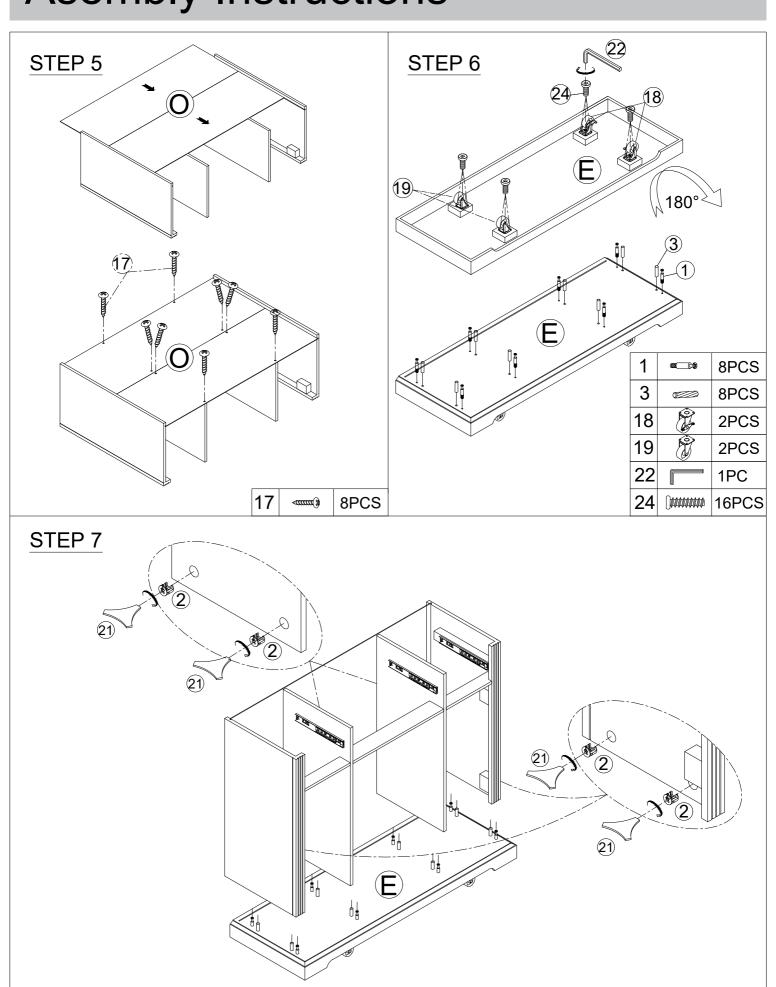

8PCS


8PCS

8PCS


1PC


1 2


3

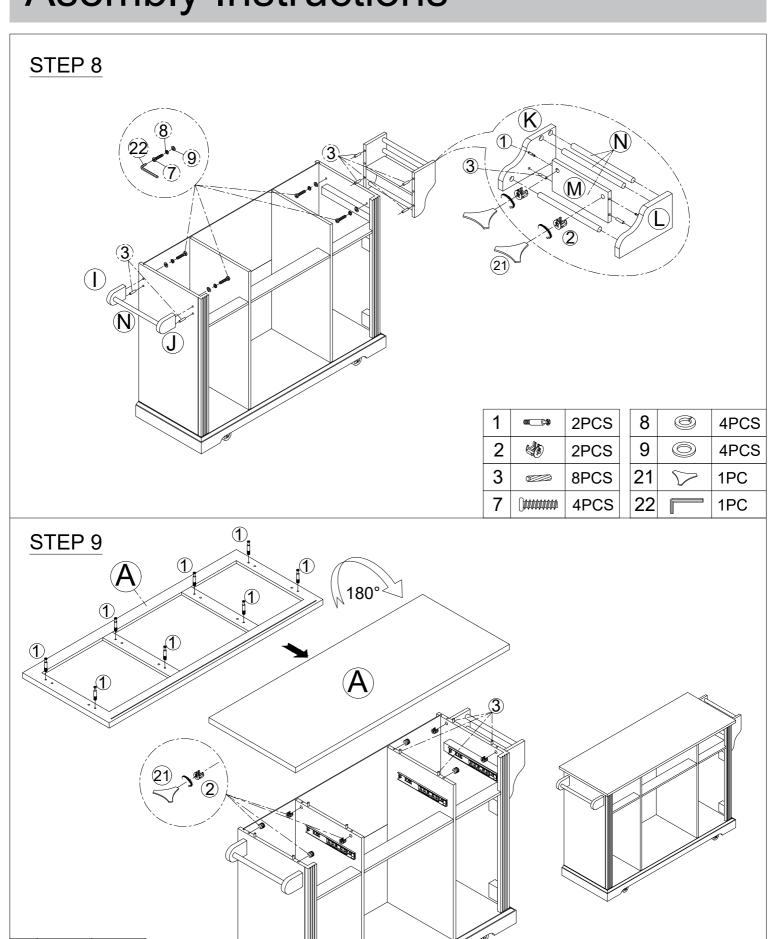


13

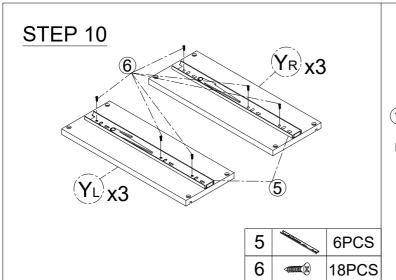


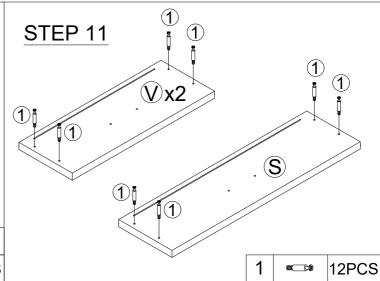

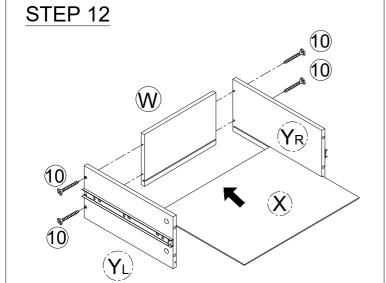

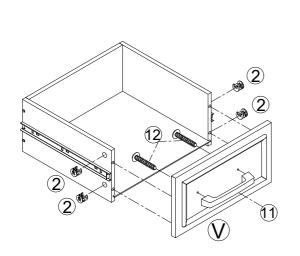


2		8PCS
10	<b>∢</b> mmmmm√	8PCS
11		2PCS
12		4PCS

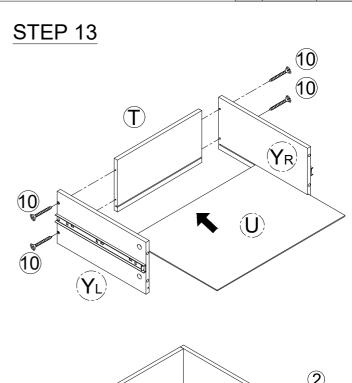


2		4PCS
10	<b>∢</b> mmmmm√	4PCS
11		1PCS
12		2PCS


2PCS 14

11

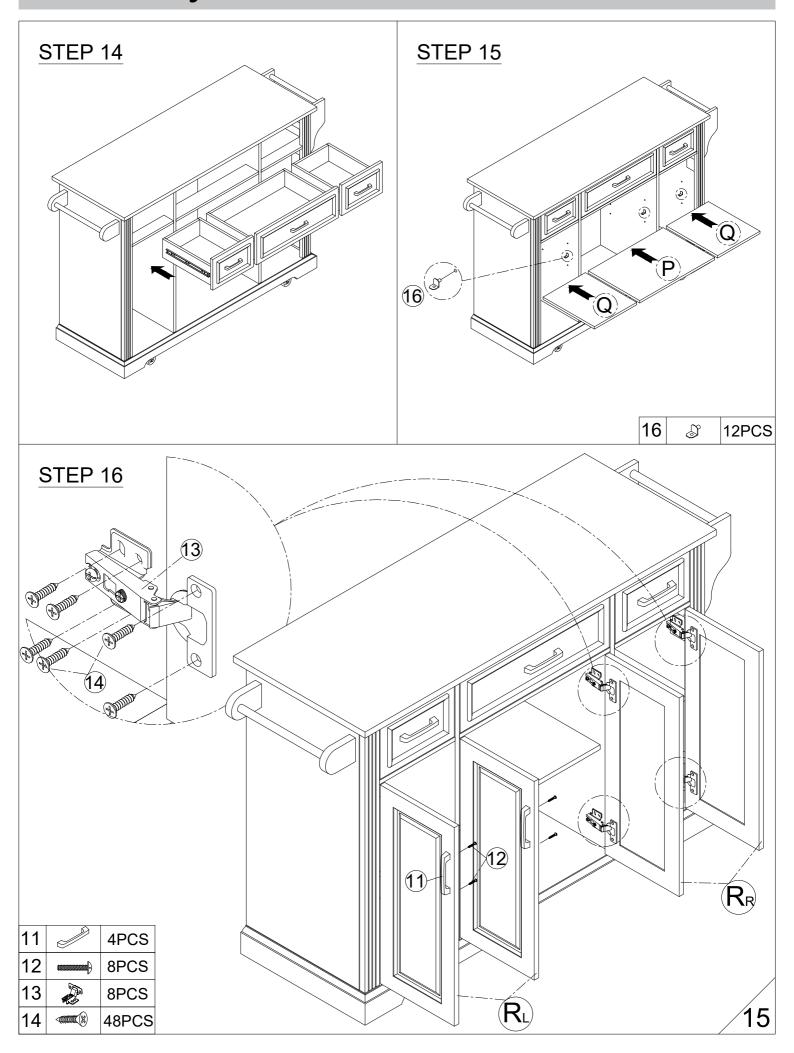


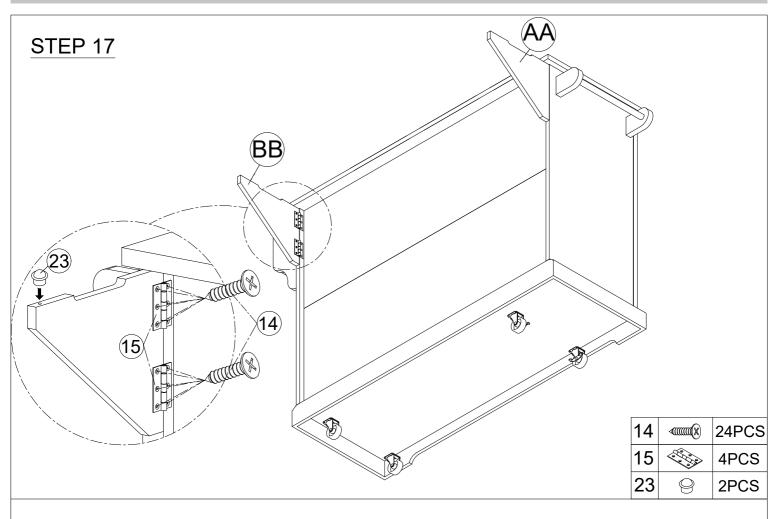




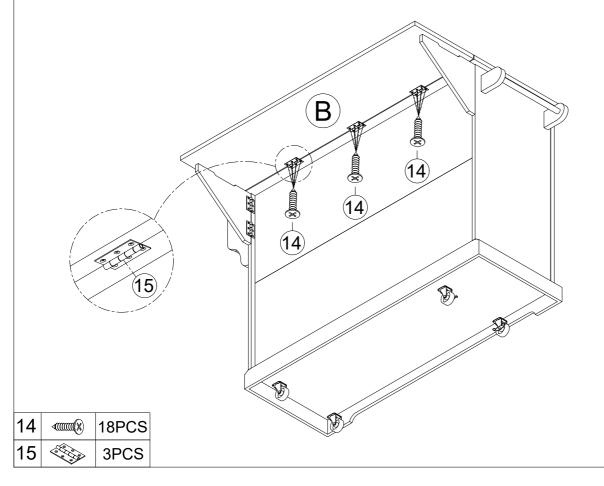

**/16** 

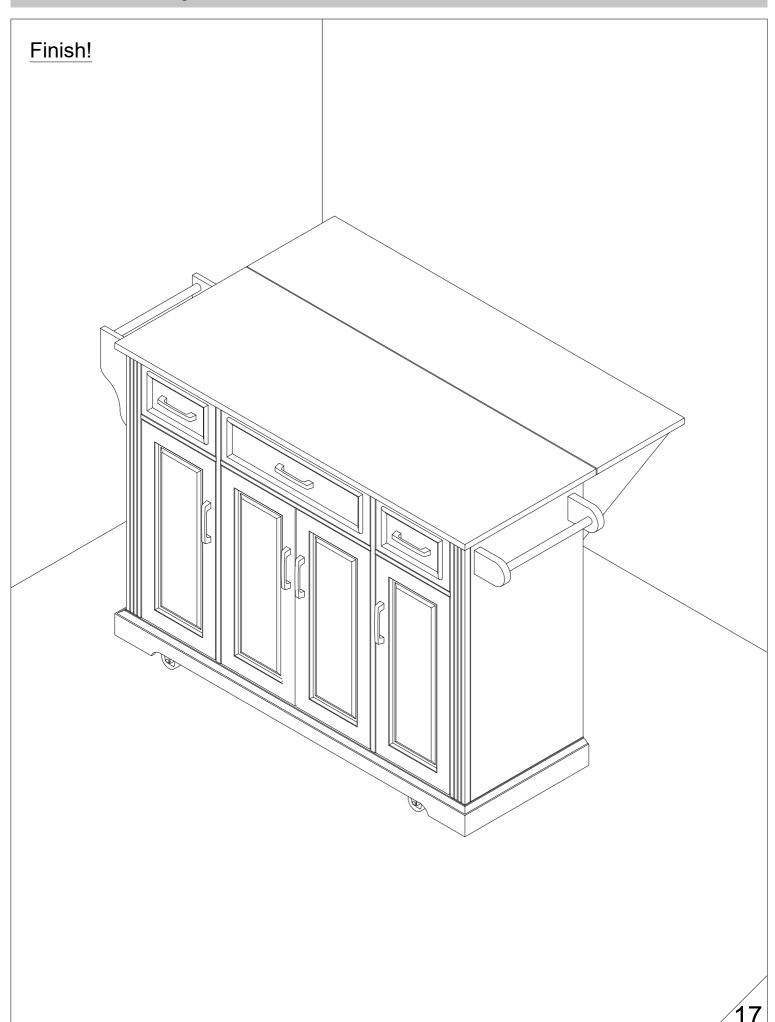


#### HINGE ADJUSTMENTS

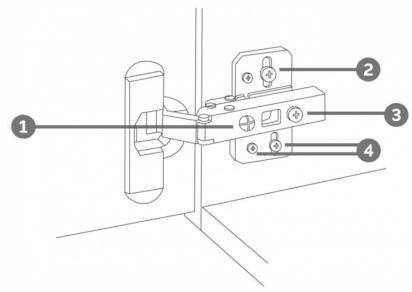

#### 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

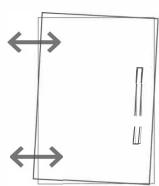

#### 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

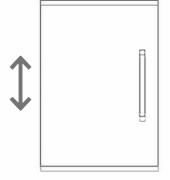

#### Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

**clockwise** to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

