



Before Installation:

- Please do not install any dimmer switch, but it is available to use a simple "on/off" wall switch with the remote.
- If you purchased the dimmable ceiling fan and are willing to install a dimmer switch, please do not install this remote. It does not acknowledge installing both controls at the same time.

Installation & Function

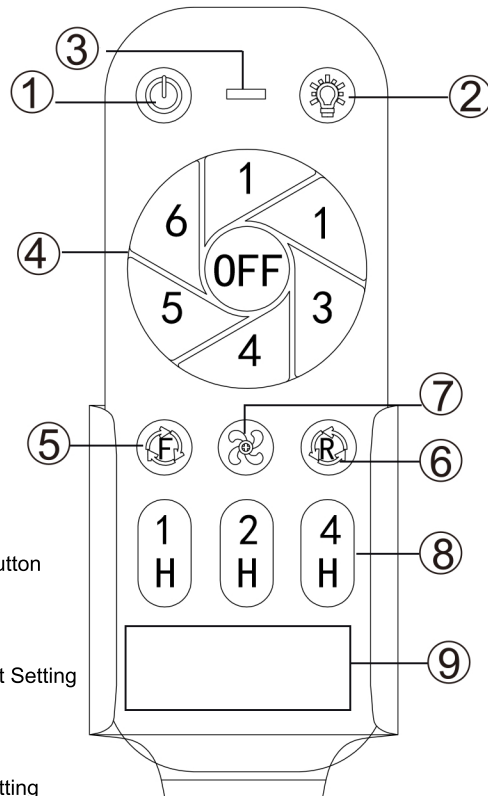

- 1.General Turn On/Off Button
- 2.Light Control/Switch
- 3.Status Indicating Light
- 4.Fan Grades Adjustment Setting
- 5.Running Fan
- 6.Reversing Fan
- 7.Natural Wind Model Setting
- 8.Timing Setting
- 9.Batteries: Two "AAA" Battery Required

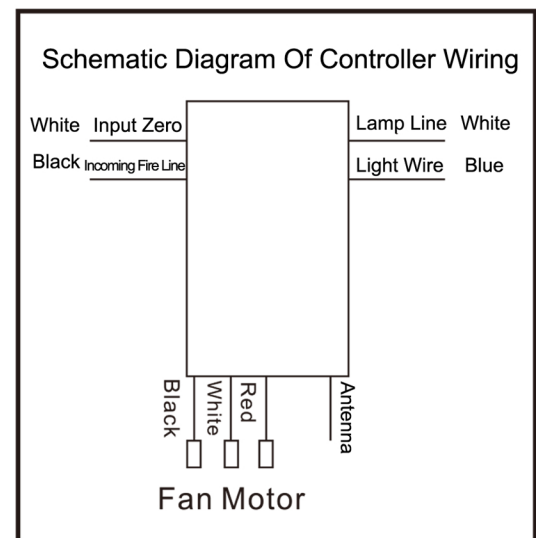

Note: The battery for the remote controller is not included under the safety concern in transit, please use model# "AAA" battery.

*For several ceiling fans, please press the the turn off/on button quickly, the light tone will change immediately.

Re-Program:

- Turn Off the main power of the Ceiling fan for 10 minute, then turn On the main power
- Press General Off for 5 seconds at the same time
- The light will flicker 3 times

Then please try the remote again.

If you have any further questions, please contact us directly for professional help with your order number
 Official Email Address: Support@BellaDepot.com