


# Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P170347

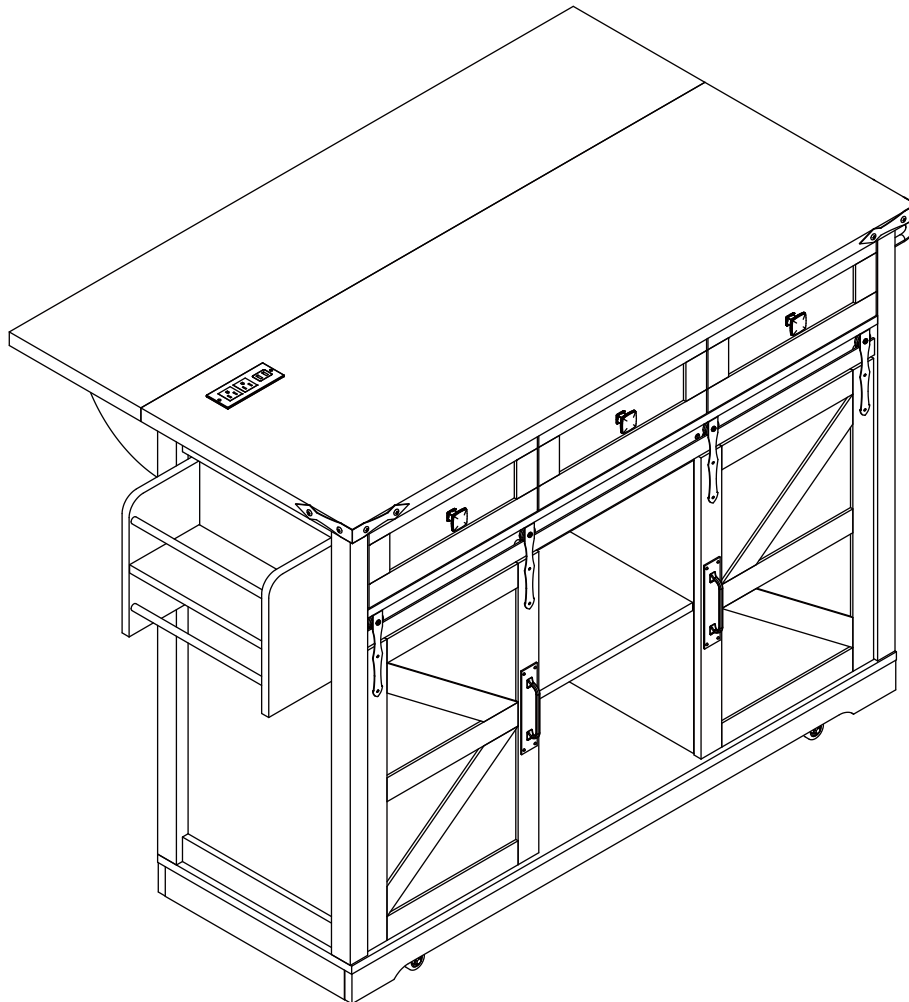

## Dimensions

Width-47.2inch

Depth-17.7inch+11inch

Height-36.2inch

**Important – Please read these instructions fully before starting assembly**

Issue 1 - 05/05/24



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose






























Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


# Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>(A)</b>  Cam Bolt x 34	<b>(B)</b>  Cam lock x 34	<b>(C)</b>  6*30mm Dowel x 38	<b>(D)</b>  4*35mm Screw x 29
<b>(E)</b>  3*12mm Screw x 36	<b>(F)</b>  Hold hands x 2	<b>(G)</b>  4*14mm Screw x 4	<b>(H)</b>  6*50mm Screw x 2
<b>(I)</b>  100*100*22mm x 2	<b>(J)</b>  Iron bar x 1	<b>(K)</b>  Caster x 3	<b>(L)</b>  Locking caster x 2
<b>(M)</b>  4*14mm Screw x 8	<b>(N)</b>  hinge x 7	<b>(O)</b>  Pivot x 10	<b>(P)</b>  3.5*12mm Screw x 42
<b>(Q)</b>  Hold hands x 3	<b>(R)</b>  Pulley x 4	<b>(S)</b>  Pulley x 1	<b>(T)</b>  Screwdriver x 1
<b>(U)</b>  6*20mm Screw x 4	<b>(V)</b>  4*16mm Screw x 3	<b>(W)</b>  6*14mm Screw x 20	<b>(X)</b>  4*25mm Screw x 20
<b>(Y)</b>  4*35mm Screw x 10	<b>(CR)</b>  Runner 300mm x 3	<b>(CL)</b>  Runner 300mm x 3	<b>(DR)</b>  Runner 300mm x 3
<b>(DL)</b>  Runner 300mm x 3			

Ruler - Use this ruler to help correctly identify the screws

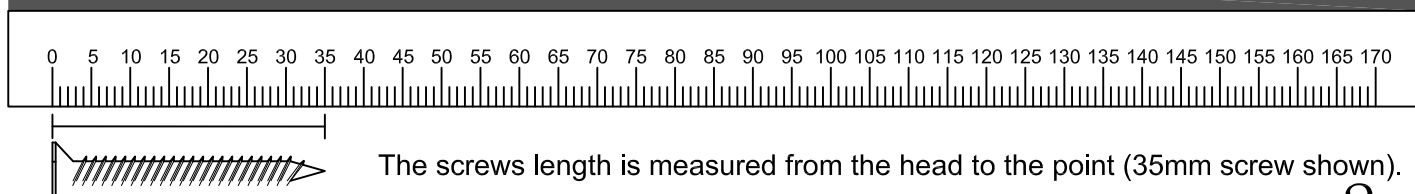


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

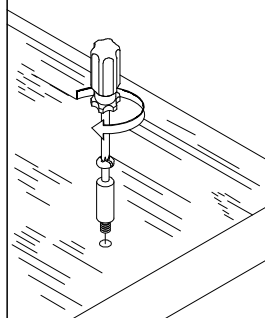

## Step 2

Push the male camlock into the entry hole.

2

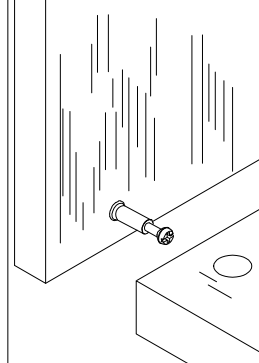


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

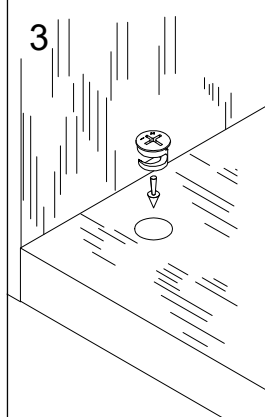


## Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

4

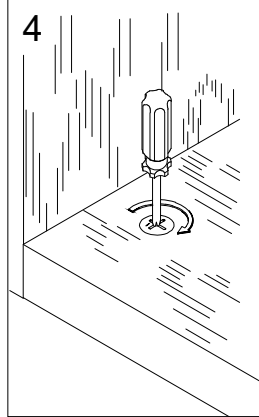


## Tools required

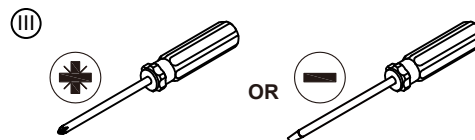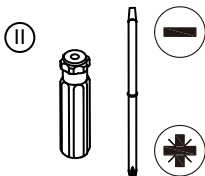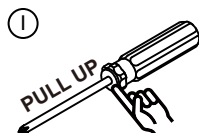















Screwdrivers can be converted to Phillips and Slotted.

















# Assembly Instructions

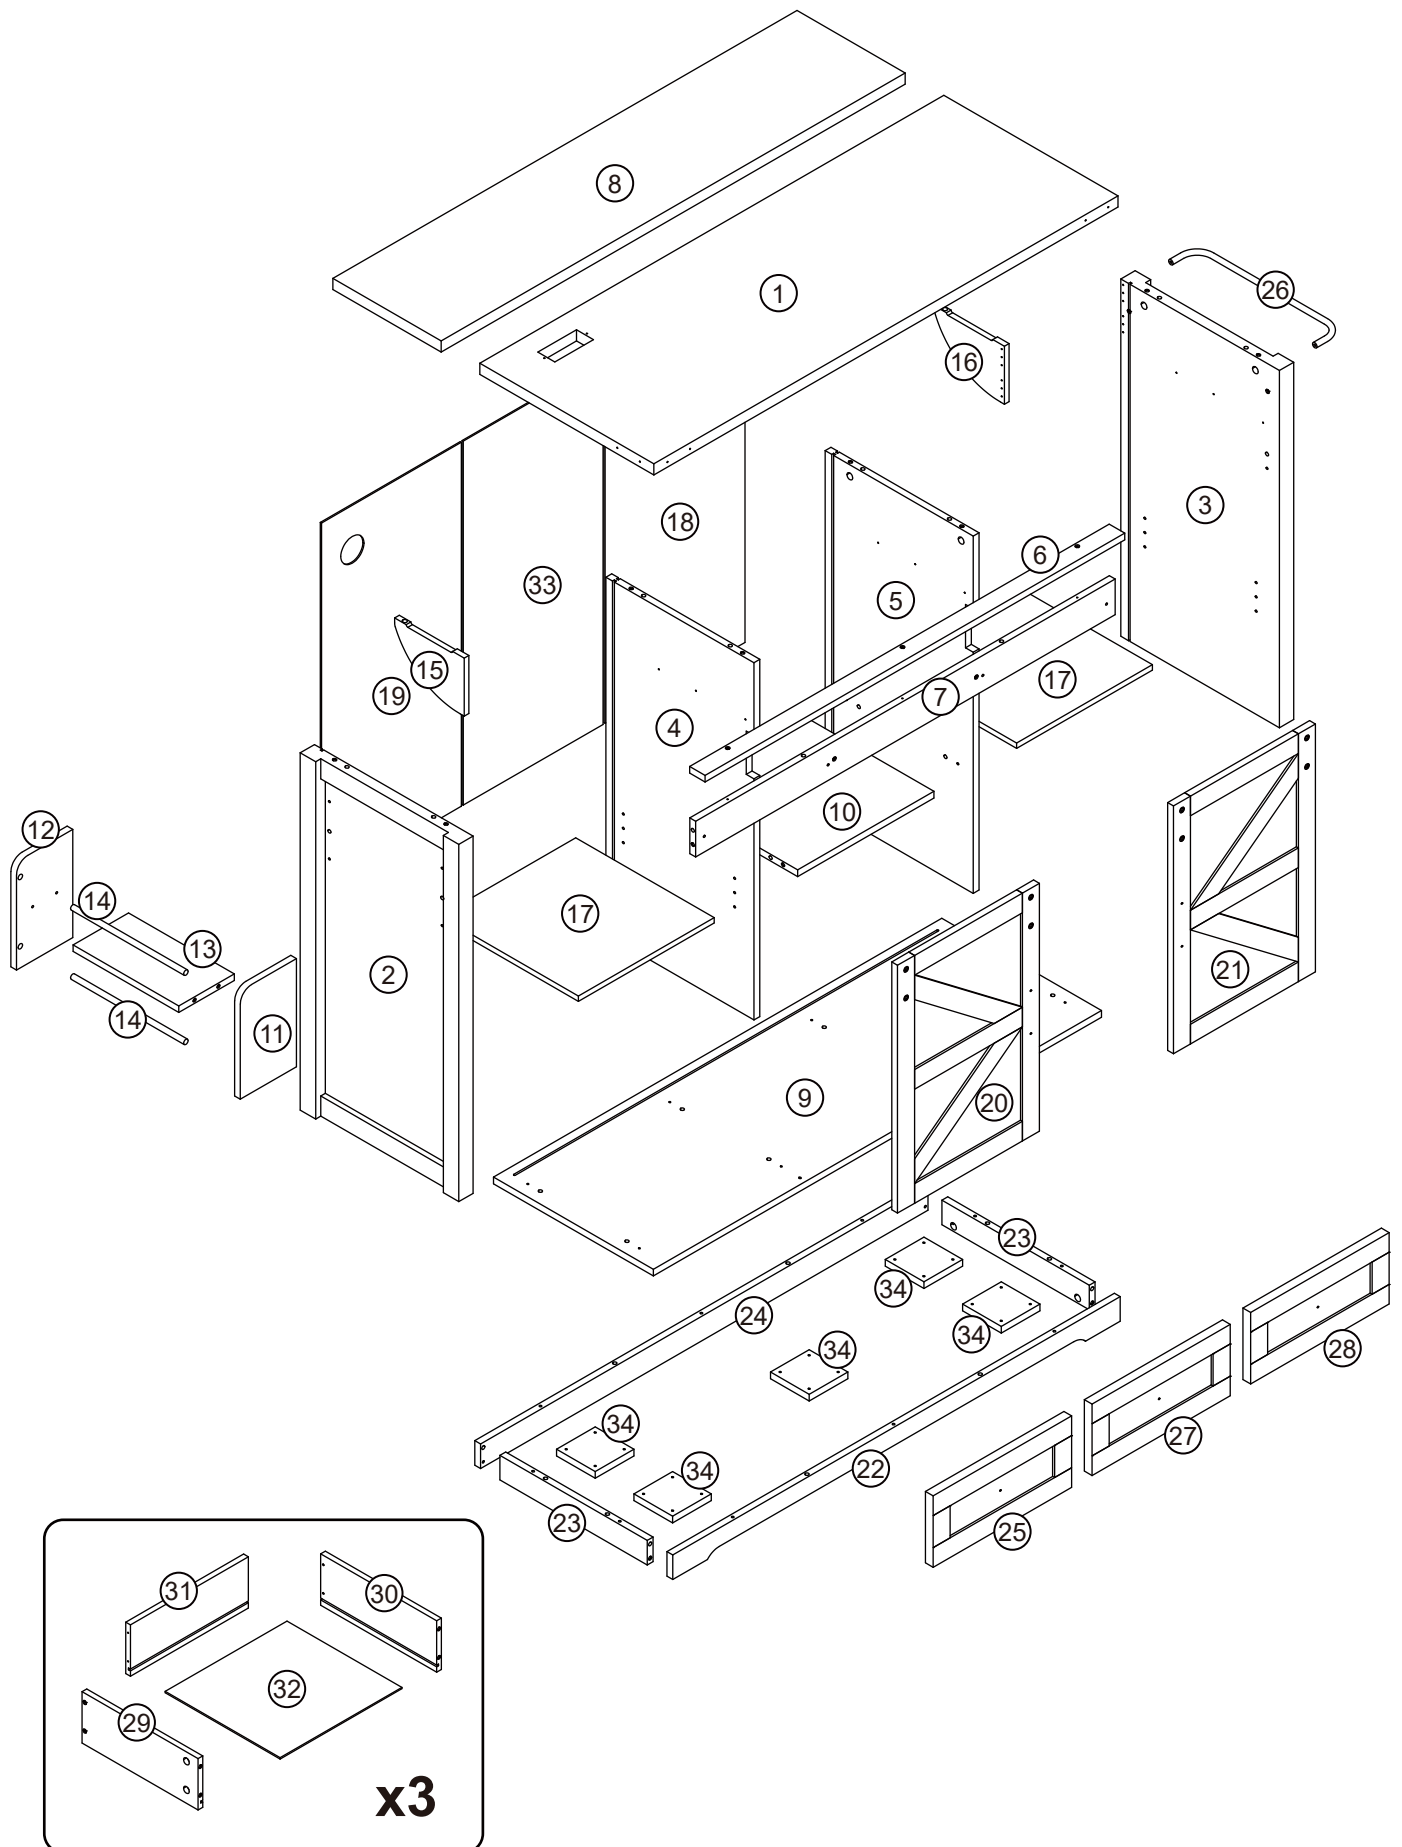







# Assembly Instructions
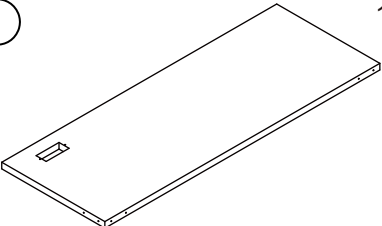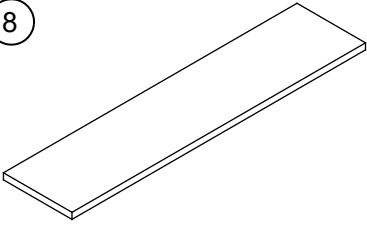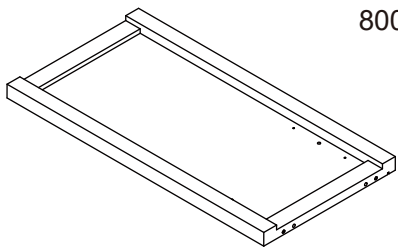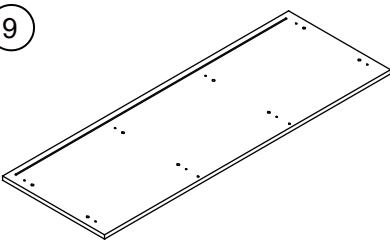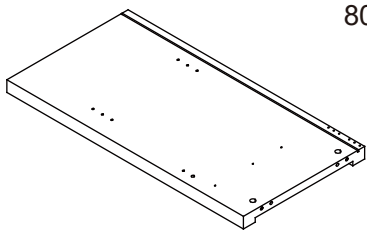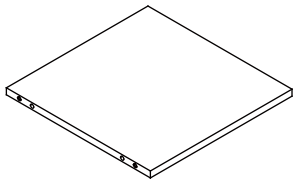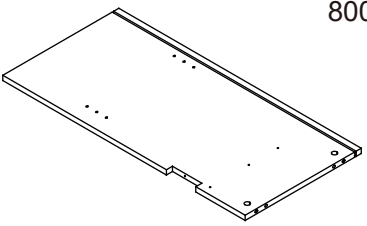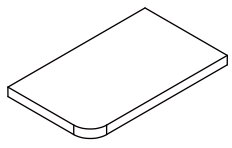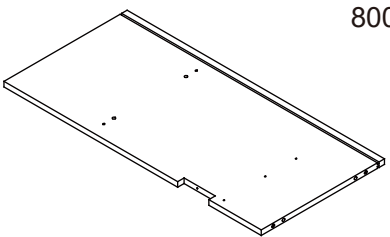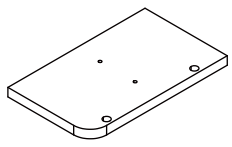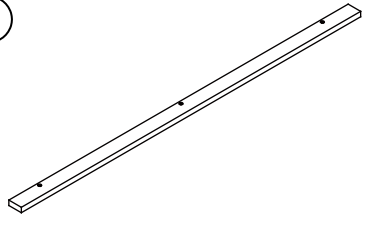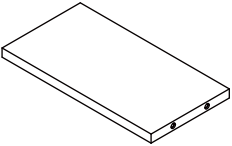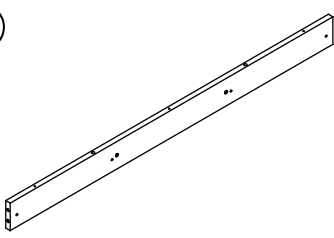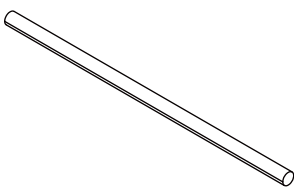
<p>①</p>  <p>1200 x 450 x 25 mm</p> <p><b>1</b></p>	<p>⑧</p>  <p>1200 x 280 x 25 mm</p> <p><b>1</b></p>
<p>②</p>  <p>800 x 413 x 37 mm</p> <p><b>1</b></p>	<p>⑨</p>  <p>1160 x 415 x 15 mm</p> <p><b>1</b></p>
<p>③</p>  <p>800 x 413 x 37 mm</p> <p><b>1</b></p>	<p>⑩</p>  <p>360 x 352 x 15 mm</p> <p><b>1</b></p>
<p>④</p>  <p>800 x 385 x 15 mm</p> <p><b>1</b></p>	<p>⑪</p>  <p>250 x 150 x 15 mm</p> <p><b>1</b></p>
<p>⑤</p>  <p>800 x 385 x 15 mm</p> <p><b>1</b></p>	<p>⑫</p>  <p>250 x 150 x 15 mm</p> <p><b>1</b></p>
<p>⑥</p>  <p>1082 x 40 x 15 mm</p> <p><b>1</b></p>	<p>⑬</p>  <p>292 x 148 x 15 mm</p> <p><b>1</b></p>
<p>⑦</p>  <p>1082 x 80 x 15 mm</p> <p><b>1</b></p>	<p>⑭</p>  <p>314 x 18 x 18 mm</p> <p><b>2</b></p>

# Assembly Instructions

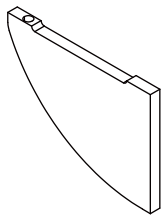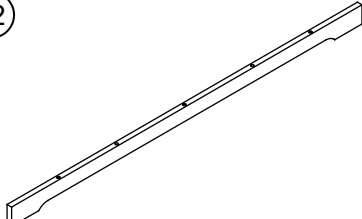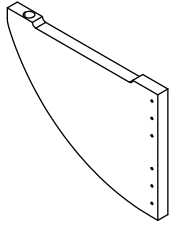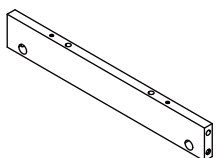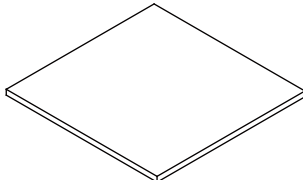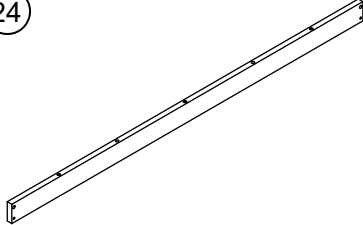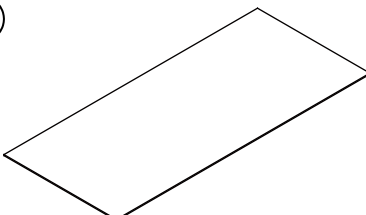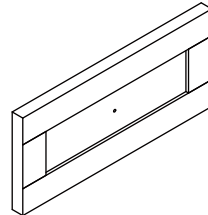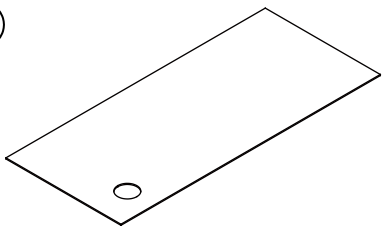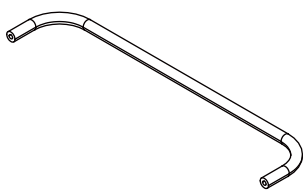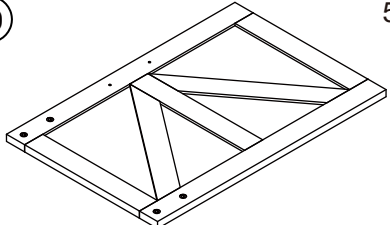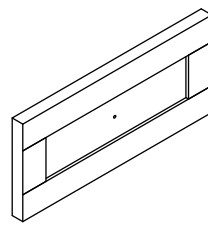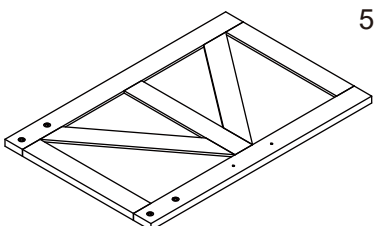
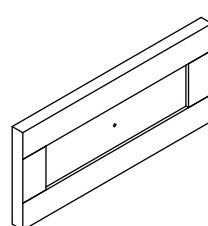
<p>15</p>  <p>180 x 135 x 18 mm</p> <p><b>1</b></p>	<p>22</p>  <p>1157 x 60 x 15 mm</p> <p><b>1</b></p>
<p>16</p>  <p>180 x 135 x 18 mm</p> <p><b>1</b></p>	<p>23</p>  <p>380 x 60 x 15 mm</p> <p><b>2</b></p>
<p>17</p>  <p>349 x 349 x 12 mm</p> <p><b>2</b></p>	<p>24</p>  <p>1157 x 60 x 15 mm</p> <p><b>1</b></p>
<p>18</p>  <p>810 x 360 x 3 mm</p> <p><b>1</b></p>	<p>25</p>  <p>358 x 160 x 20 mm</p> <p><b>1</b></p>
<p>19</p>  <p>810 x 360 x 3 mm</p> <p><b>1</b></p>	<p>26</p>  <p>388 x 80 x 13 mm</p> <p><b>1</b></p>
<p>20</p>  <p>555 x 367 x 15 mm</p> <p><b>1</b></p>	<p>27</p>  <p>358 x 160 x 20 mm</p> <p><b>1</b></p>
<p>21</p>  <p>555 x 367 x 15 mm</p> <p><b>1</b></p>	<p>28</p>  <p>358 x 160 x 20 mm</p> <p><b>1</b></p>

# Assembly Instructions

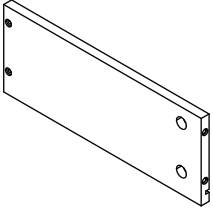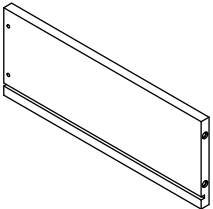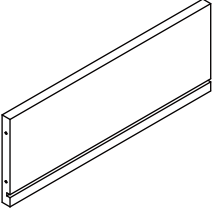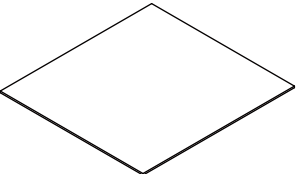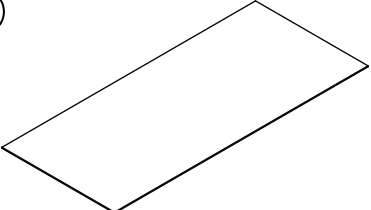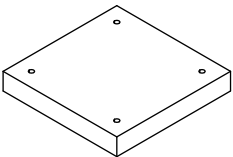
29		300 x 115 x 12 mm	<b>3</b>
30		300 x 115 x 12 mm	<b>3</b>
31		303 x 115 x 12 mm	<b>3</b>
32		311 x 295 x 3 mm	<b>3</b>
33		810 x 358 x 3 mm	<b>1</b>
34		100 x 100 x 15 mm	<b>5</b>

# Assembly Instructions

## Step 1

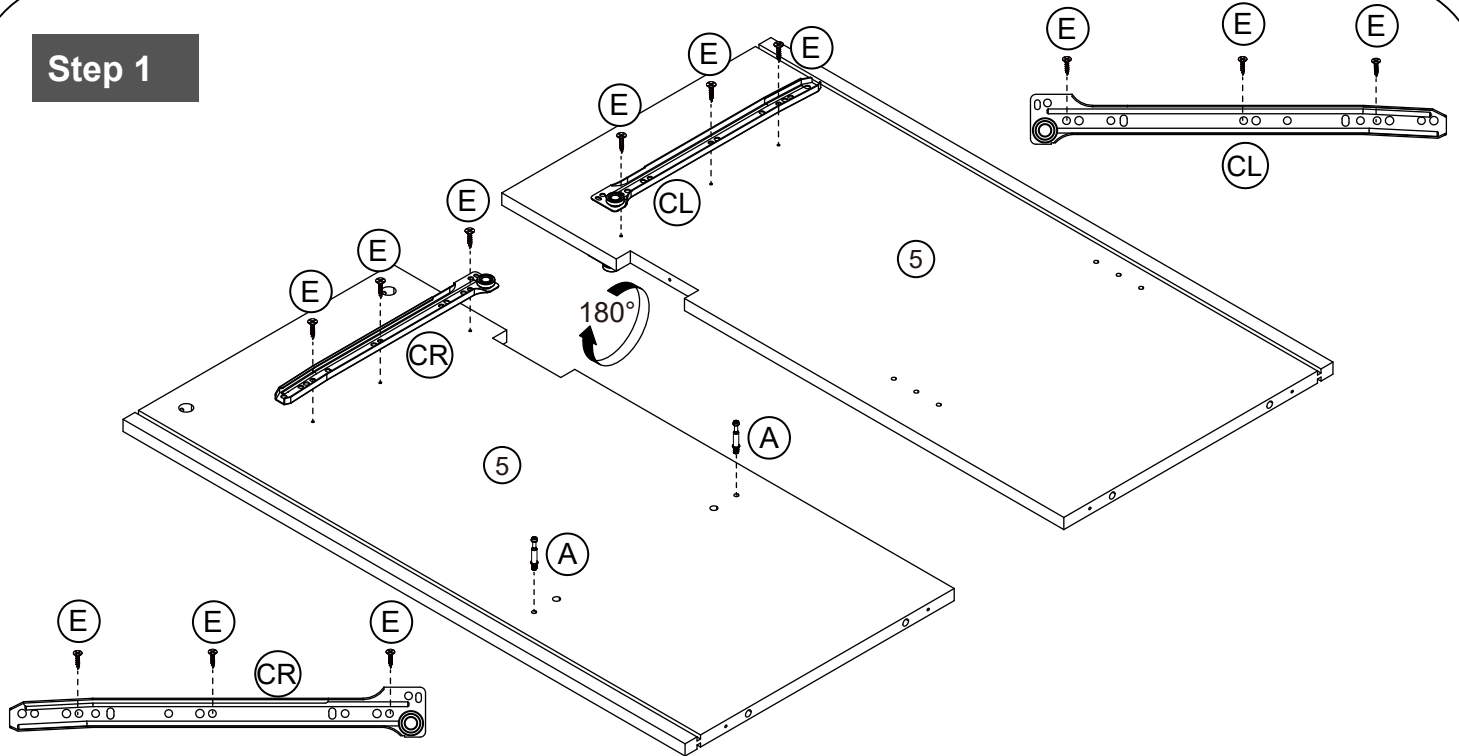

Cam Bolt x 2



3\*12mm Screw x 6





Runner 300mm x 1




Runner 300mm x 1

## Step 2

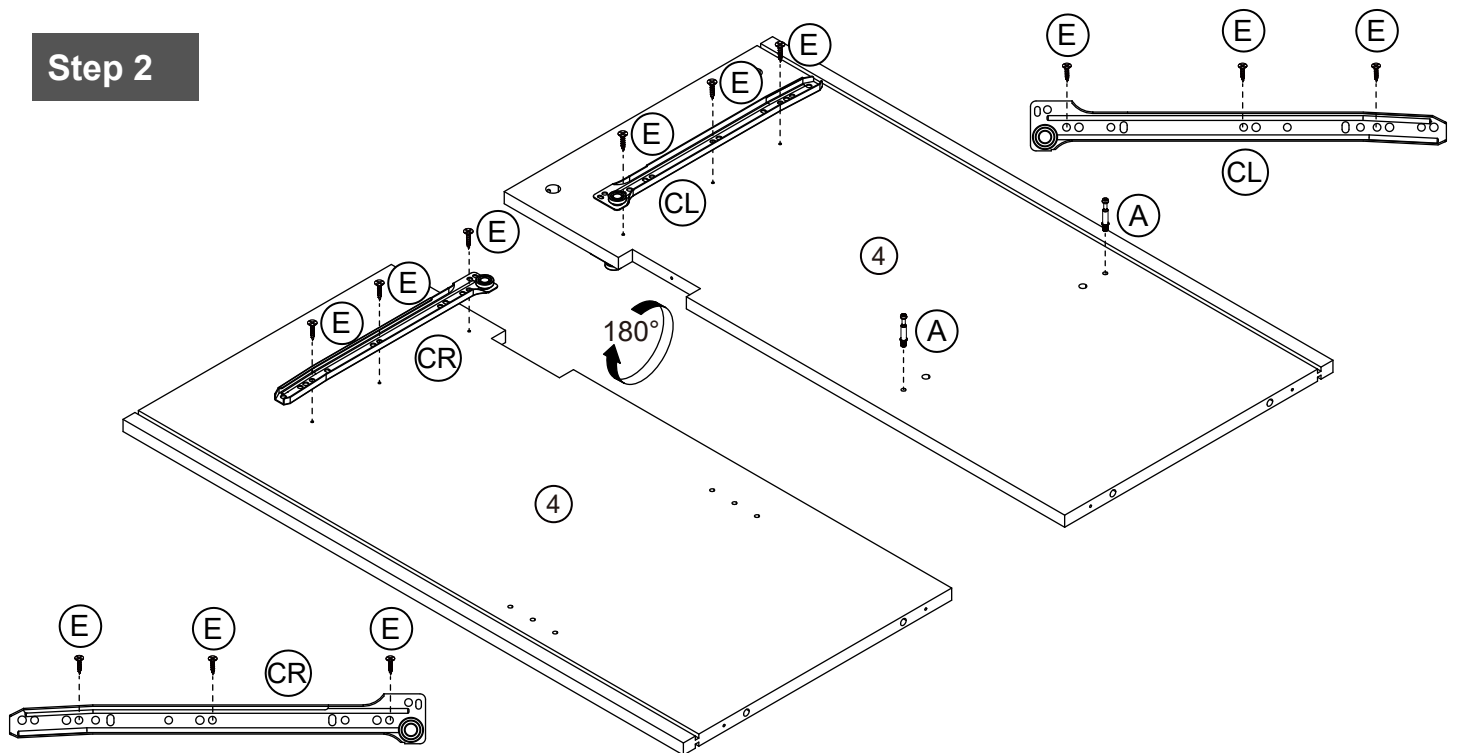

Cam Bolt x 2



3\*12mm Screw x 6




Runner 300mm x 1



Runner 300mm x 1

# Assembly Instructions

## Step 3

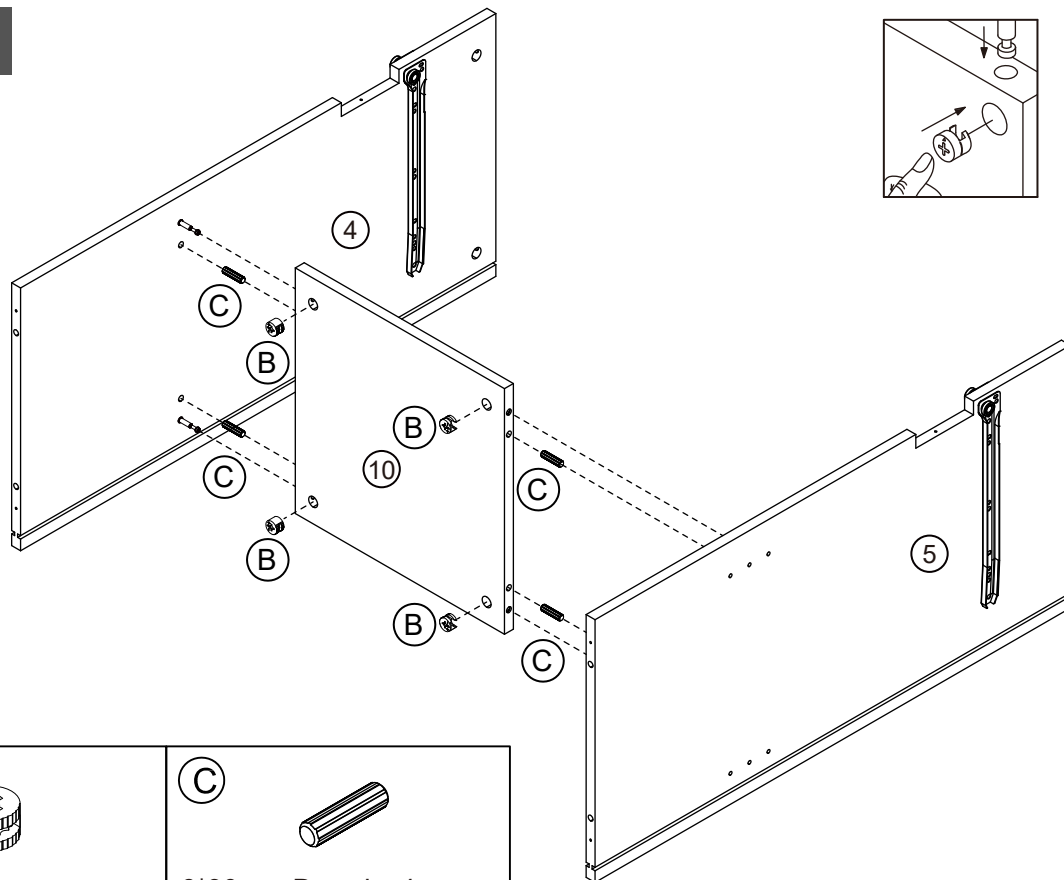

(B)




Cam lock x 4

(C)



6\*30mm Dowel x 4

## Step 4

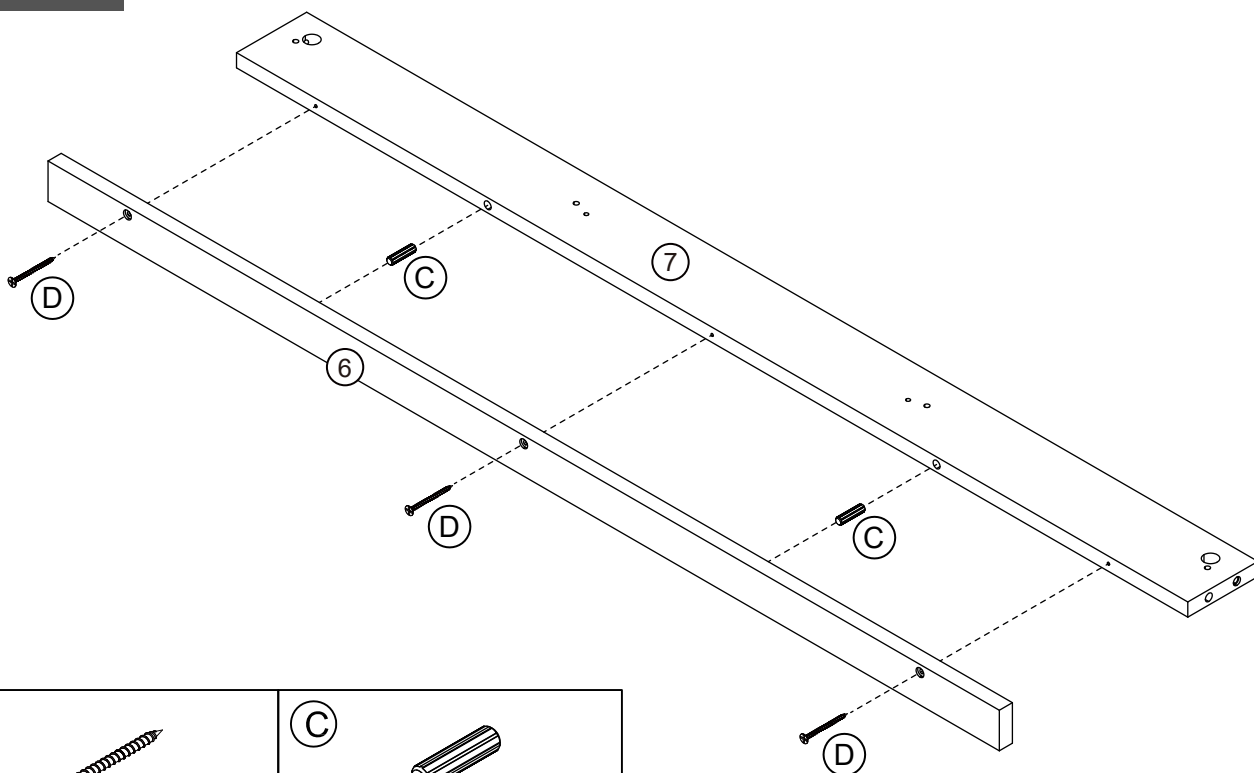

(D)



4\*35mm Screw x 3


(C)



6\*30mm Dowel x 2

# Assembly Instructions

## Step 5

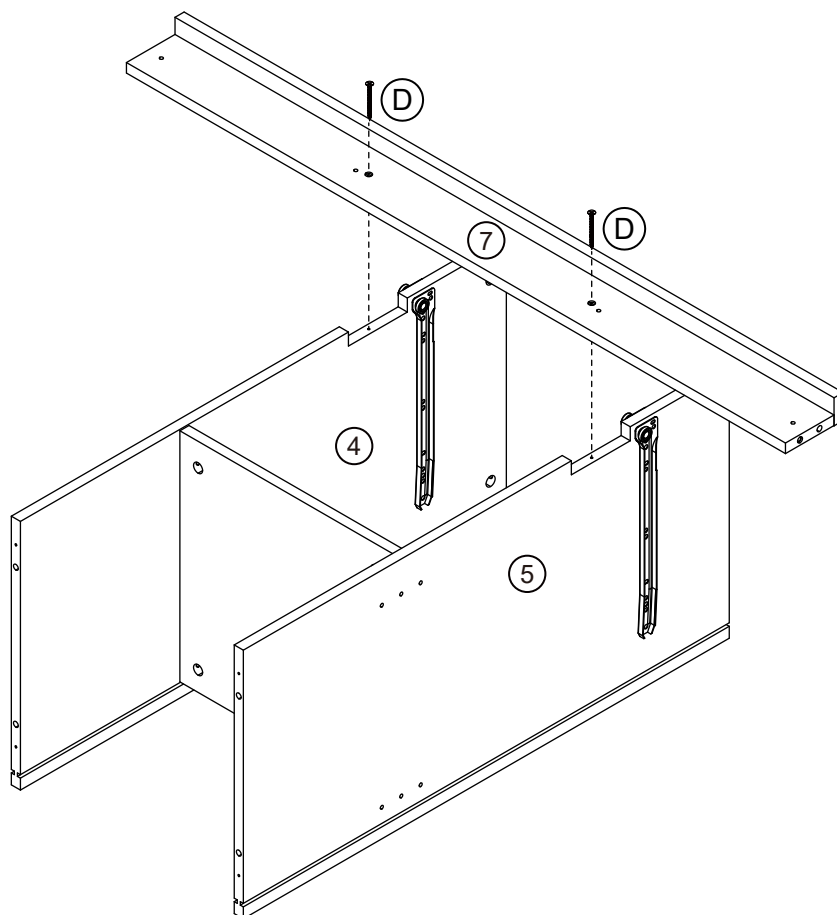


(D)




4\*35mm Screw x 2

## Step 6

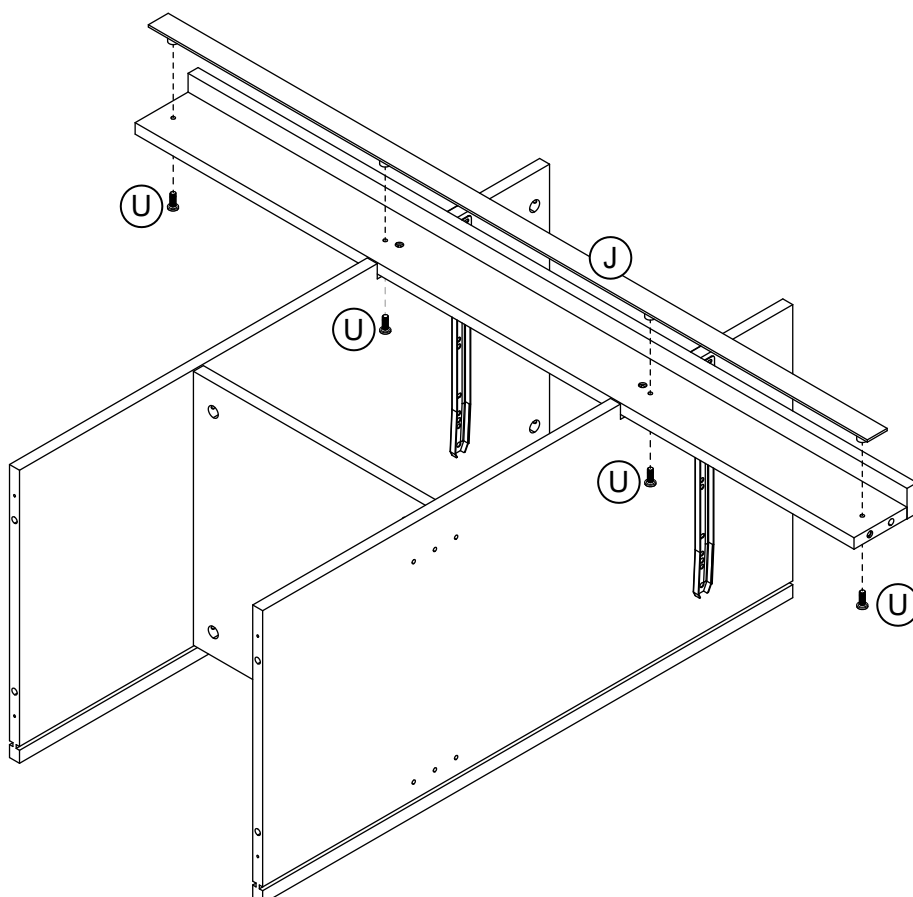

(J)



Iron bar x 1


(U)







6\*20mm Screw x 4


# Assembly Instructions


## Step 7

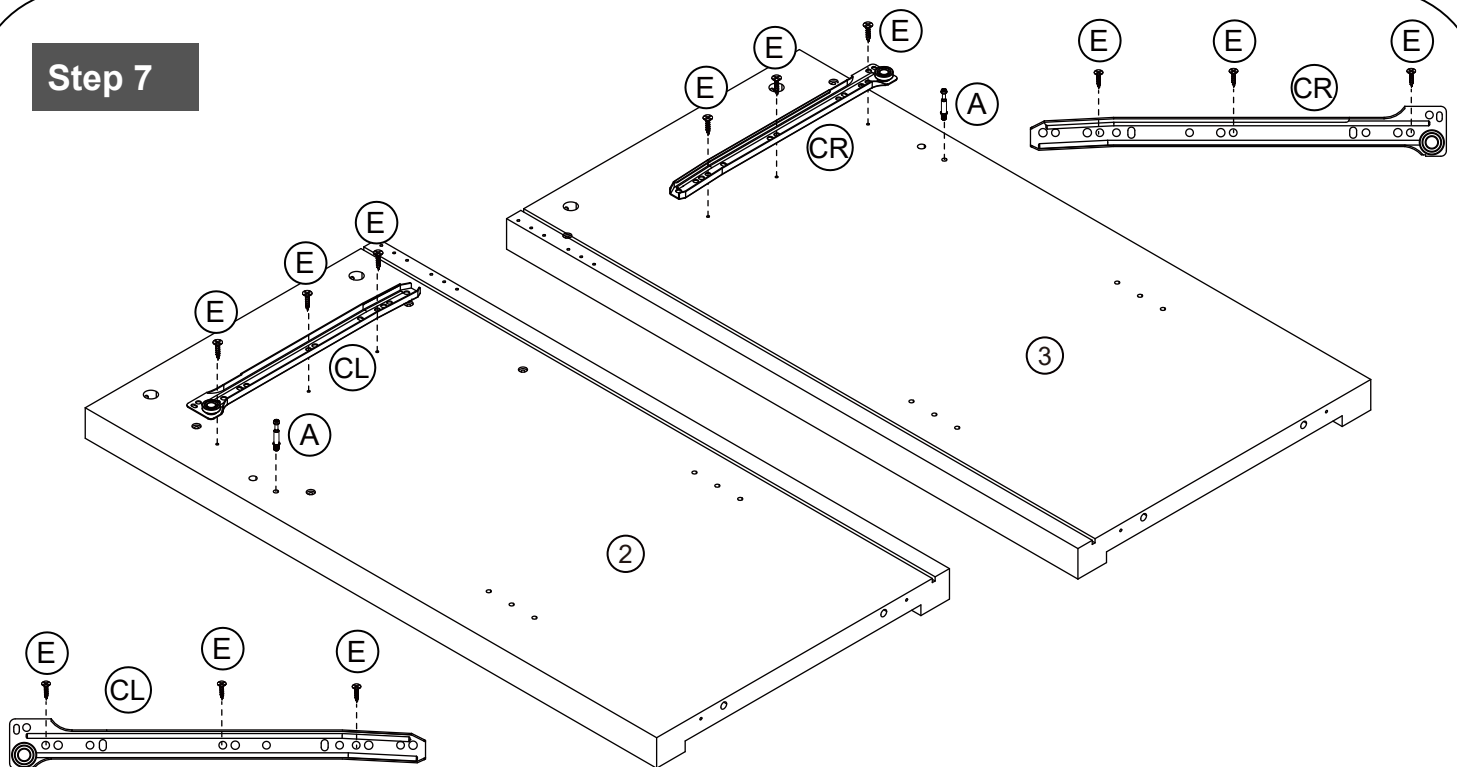

<p>(A)</p>  <p>Cam Bolt x 2</p>	<p>(E)</p>  <p>3*12mm Screw x 6</p>	<p>(CL)</p>  <p>Runner 300mm x 1</p>	<p>(CR)</p>  <p>Runner 300mm x 1</p>
--	--	--	---

## Step 8

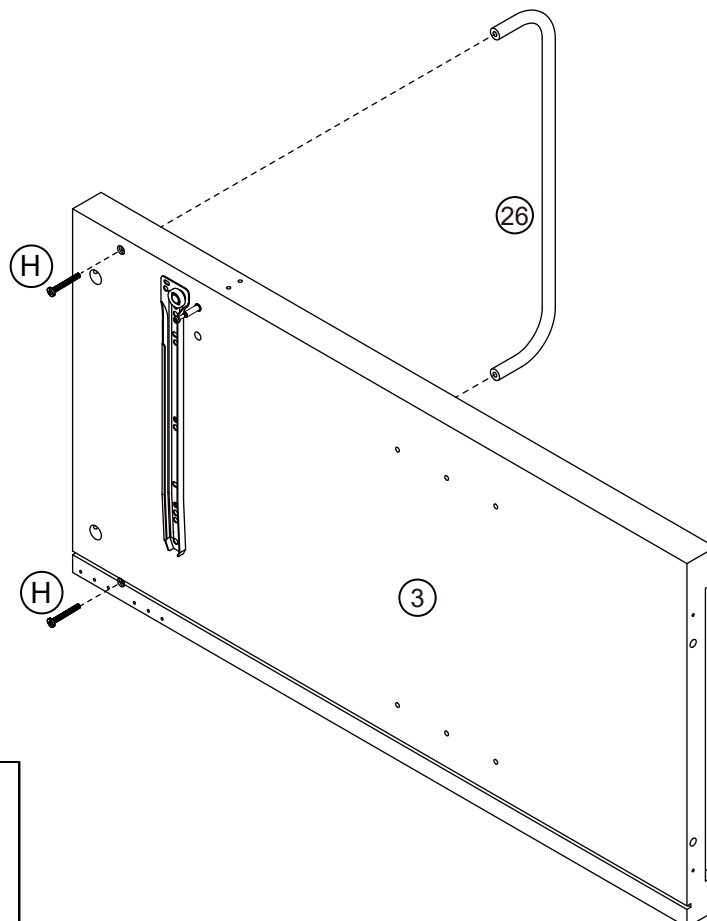


<p>(H)</p>  <p>6*50mm Screw x 2</p>
--




# Assembly Instructions

## Step 9

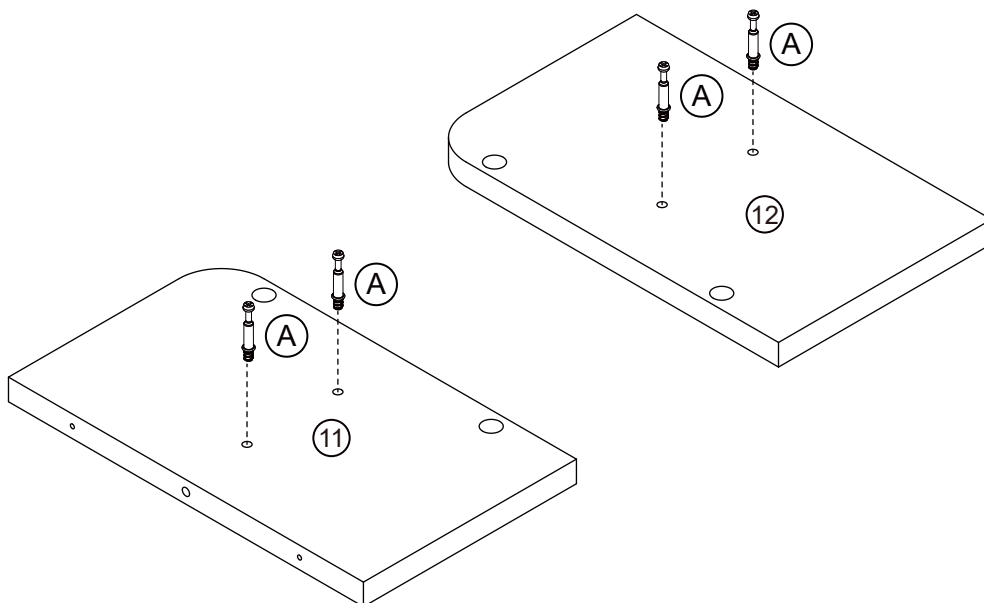


(A)



Cam Bolt x 4

## Step 10

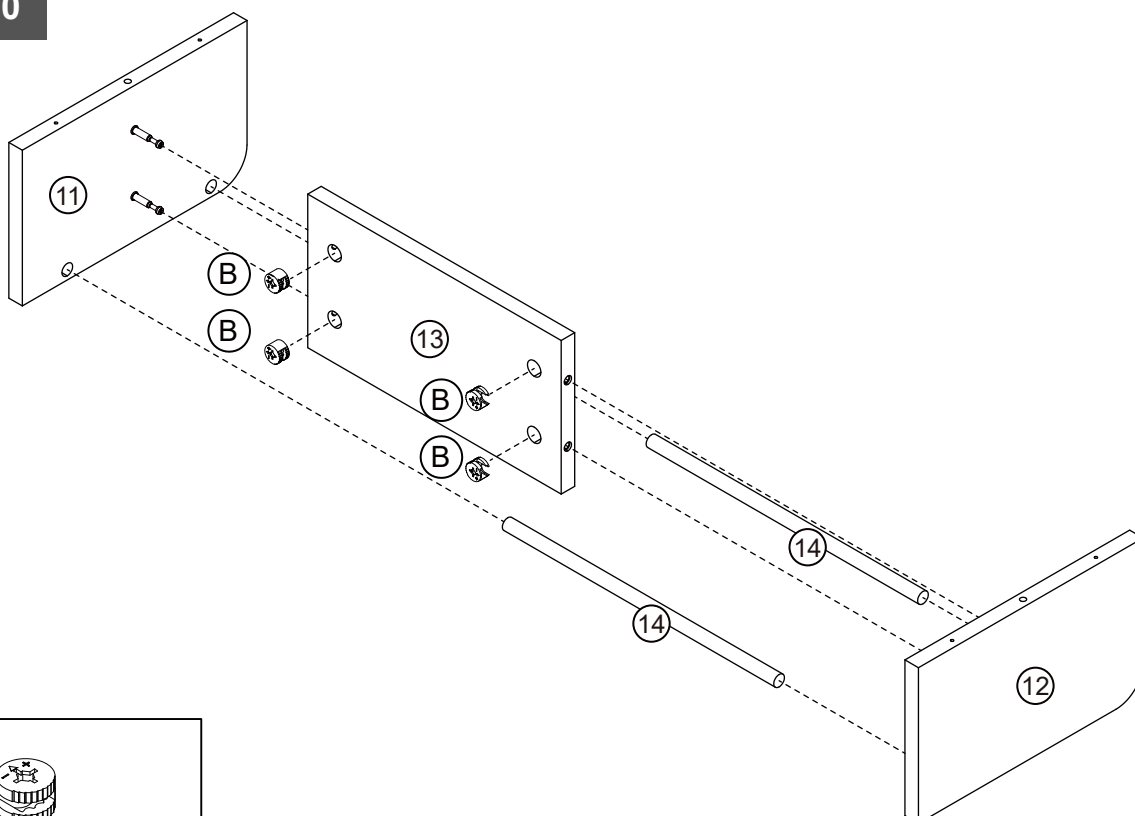


(B)



Cam lock x 4

# Assembly Instructions

## Step 11

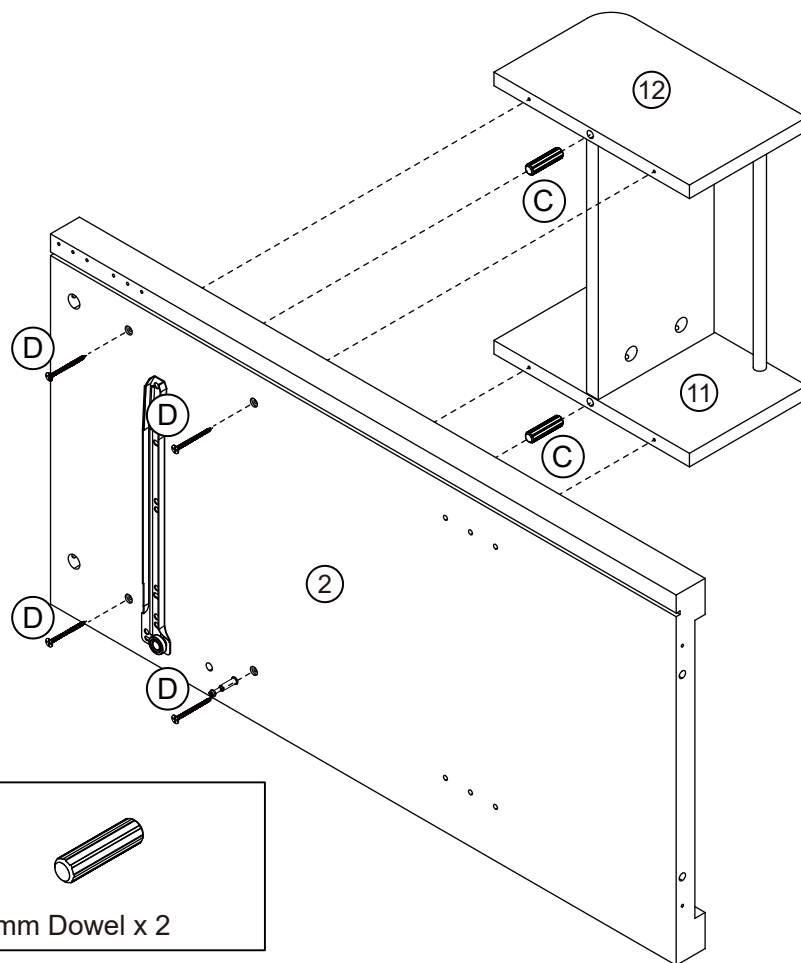

(D)




4\*35mm Screw x 4

(C)



6\*30mm Dowel x 2

## Step 12

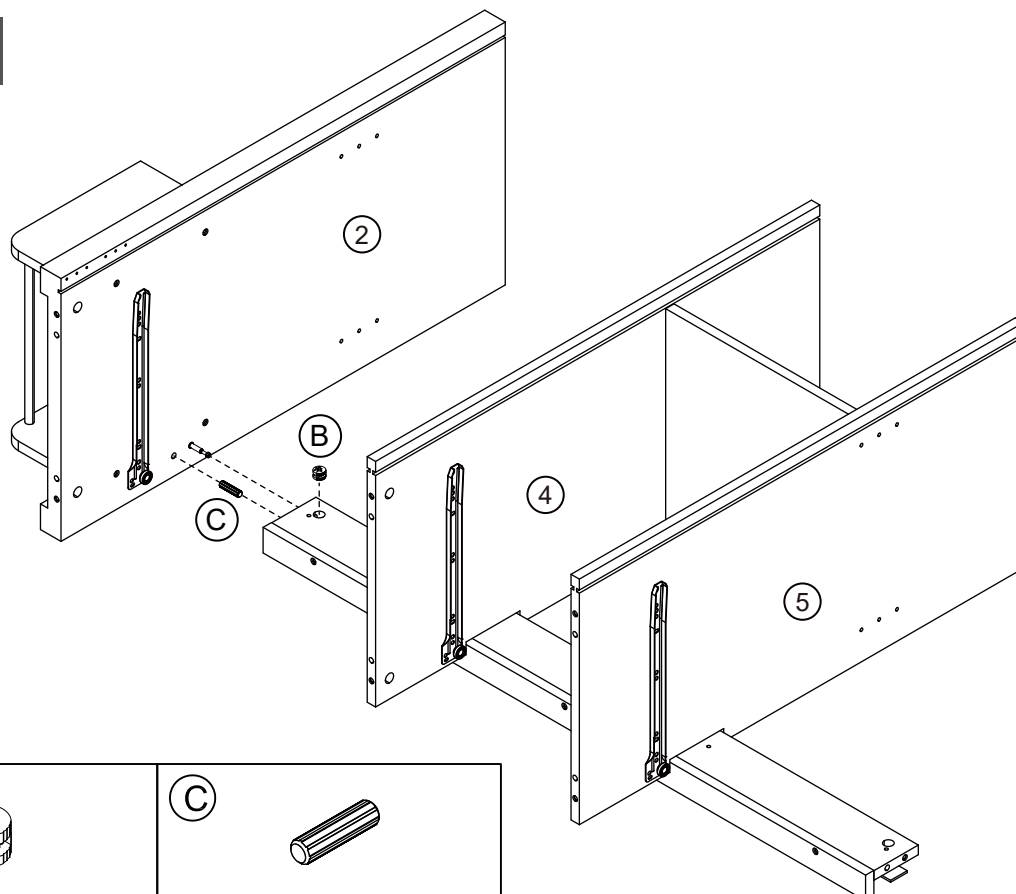

(B)



Cam lock x 1


(C)



6\*30mm Dowel x 1

# Assembly Instructions

## Step 13

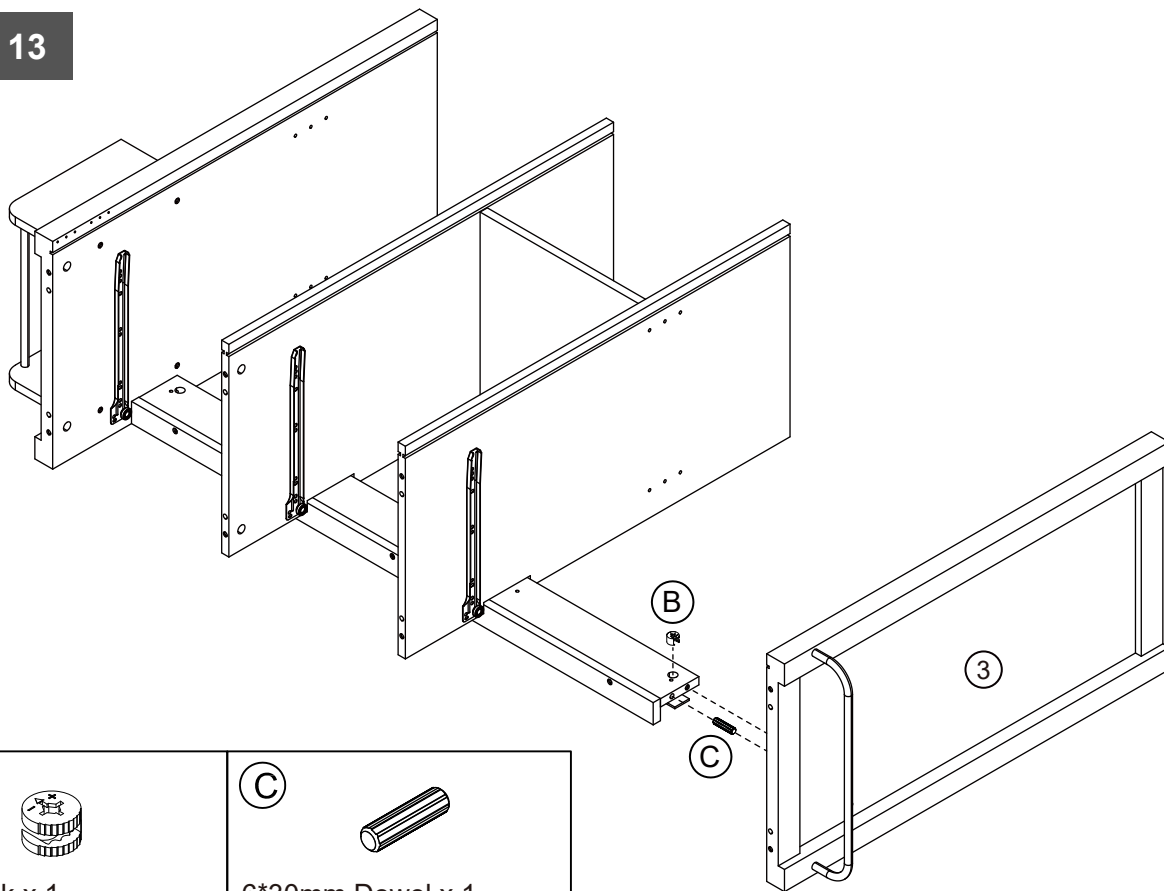

(B)




Cam lock x 1

(C)




6\*30mm Dowel x 1

## Step 14

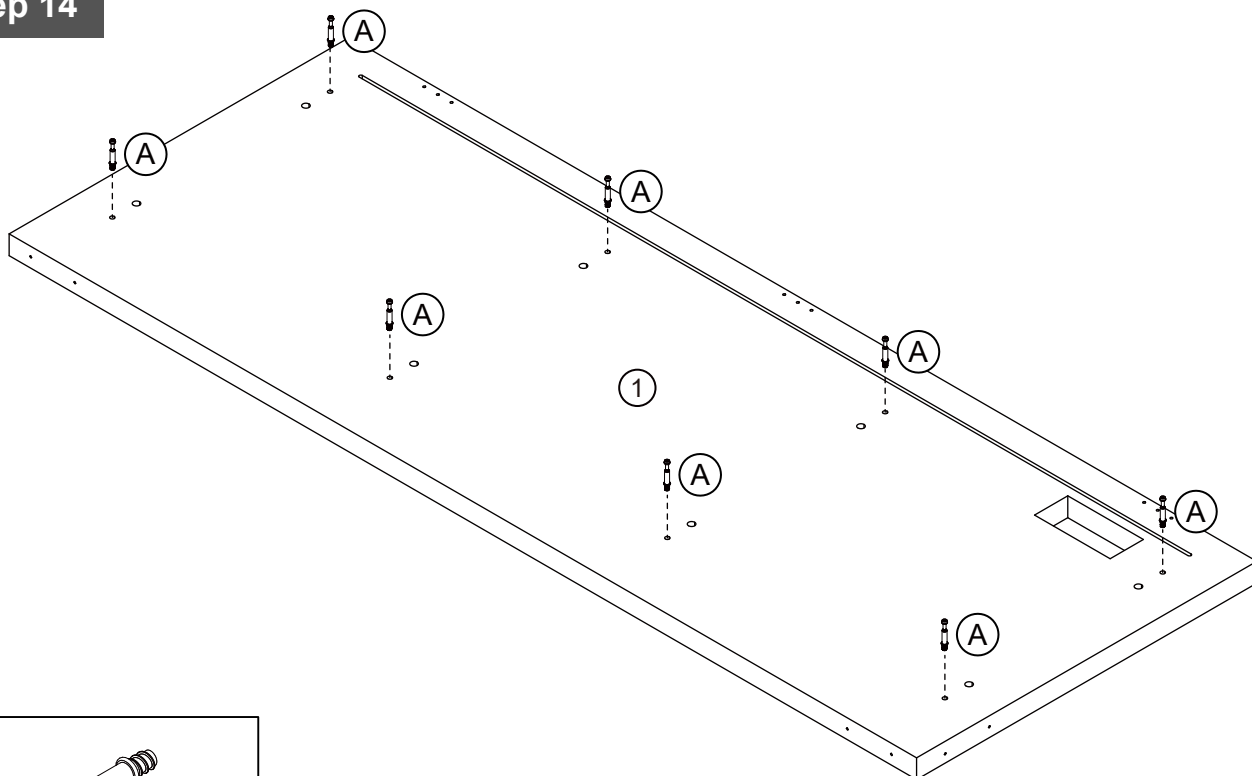


(A)



Cam Bolt x 8

# Assembly Instructions

## Step 15

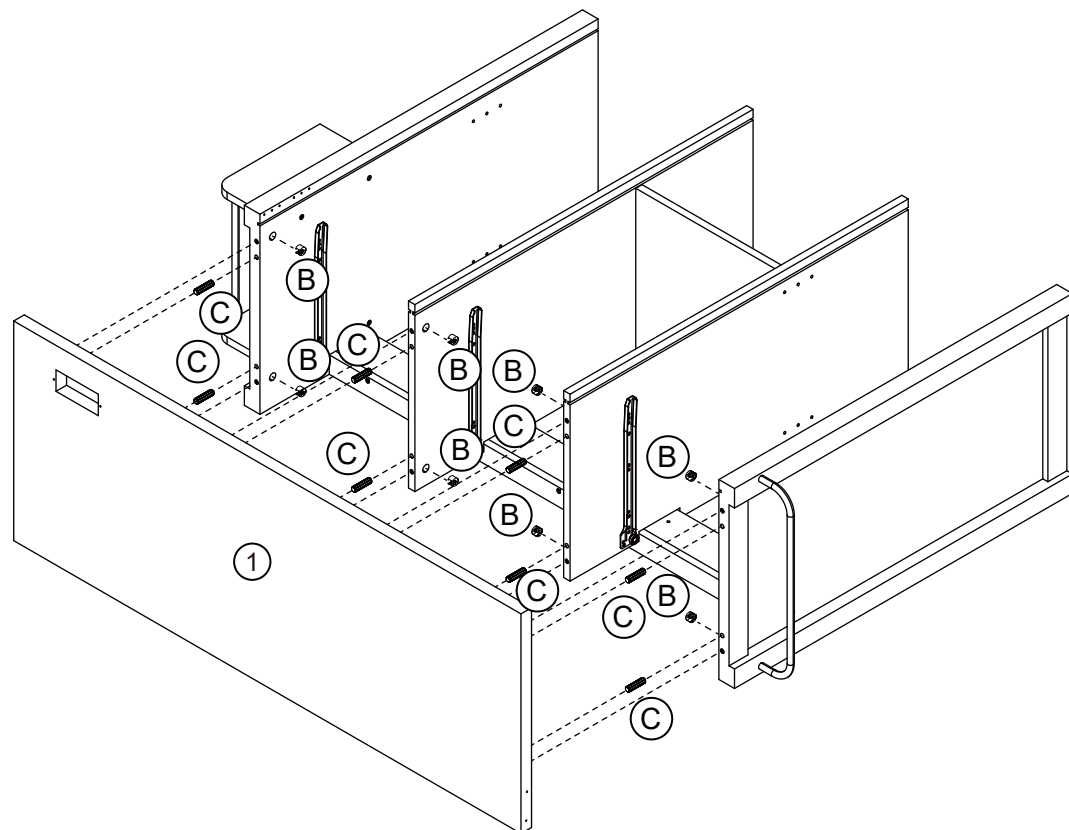

(B)




Cam lock x 8

(C)




6\*30mm Dowel x 8

## Step 16

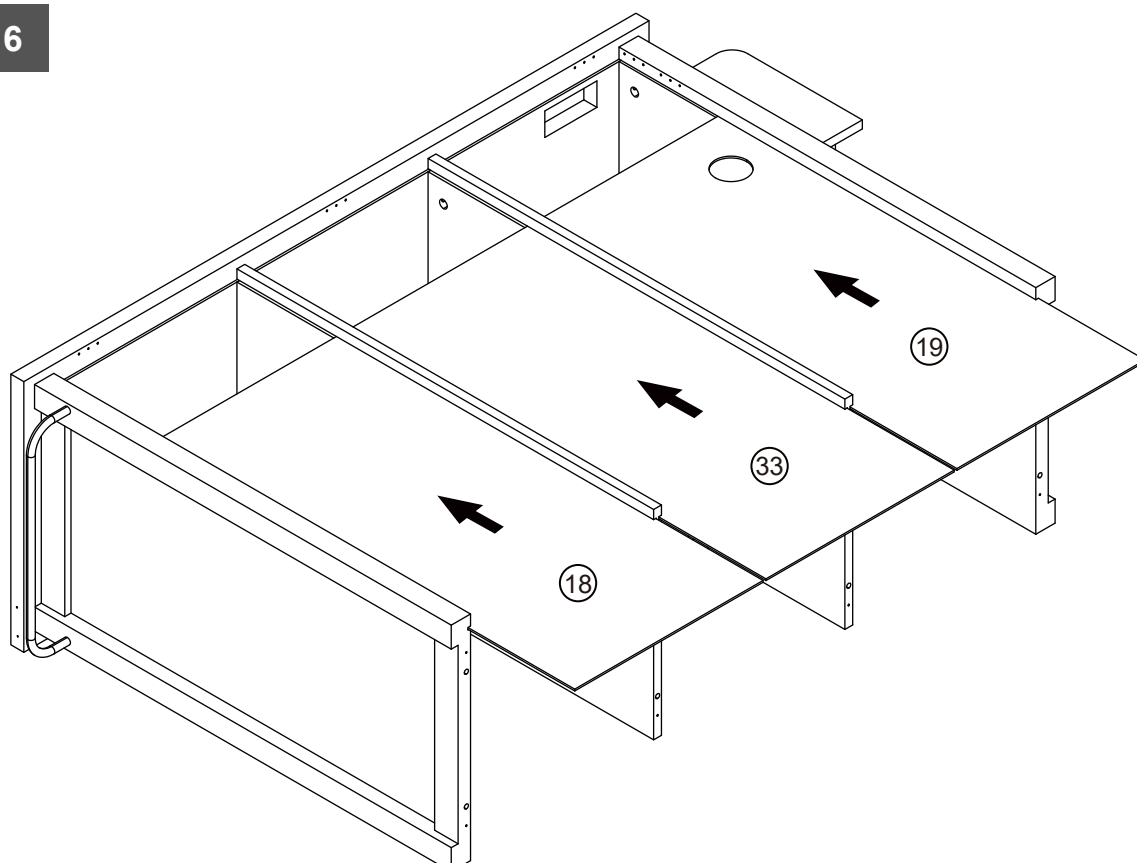

# Assembly Instructions

## Step 17

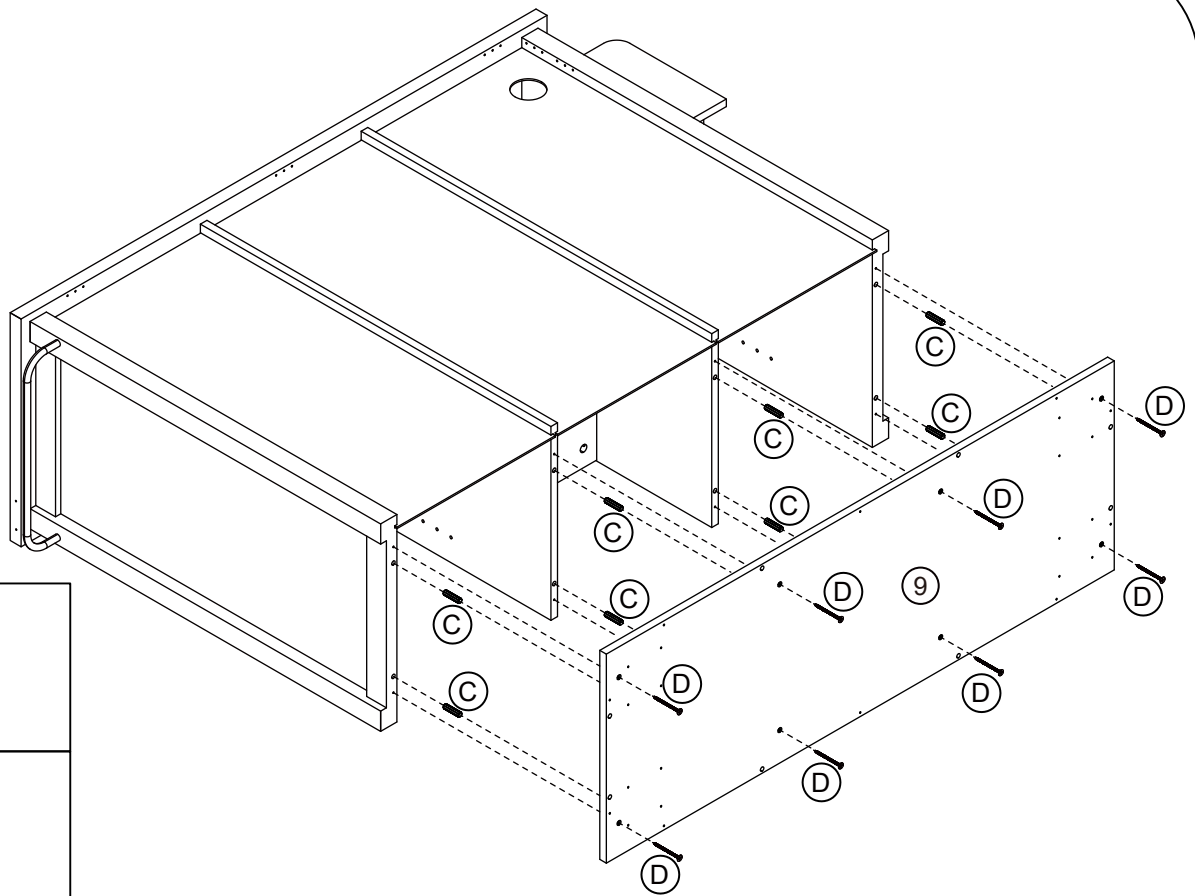

C




6\*30mm Dowel x 8

D




4\*35mm Screw x 8




## Step 18

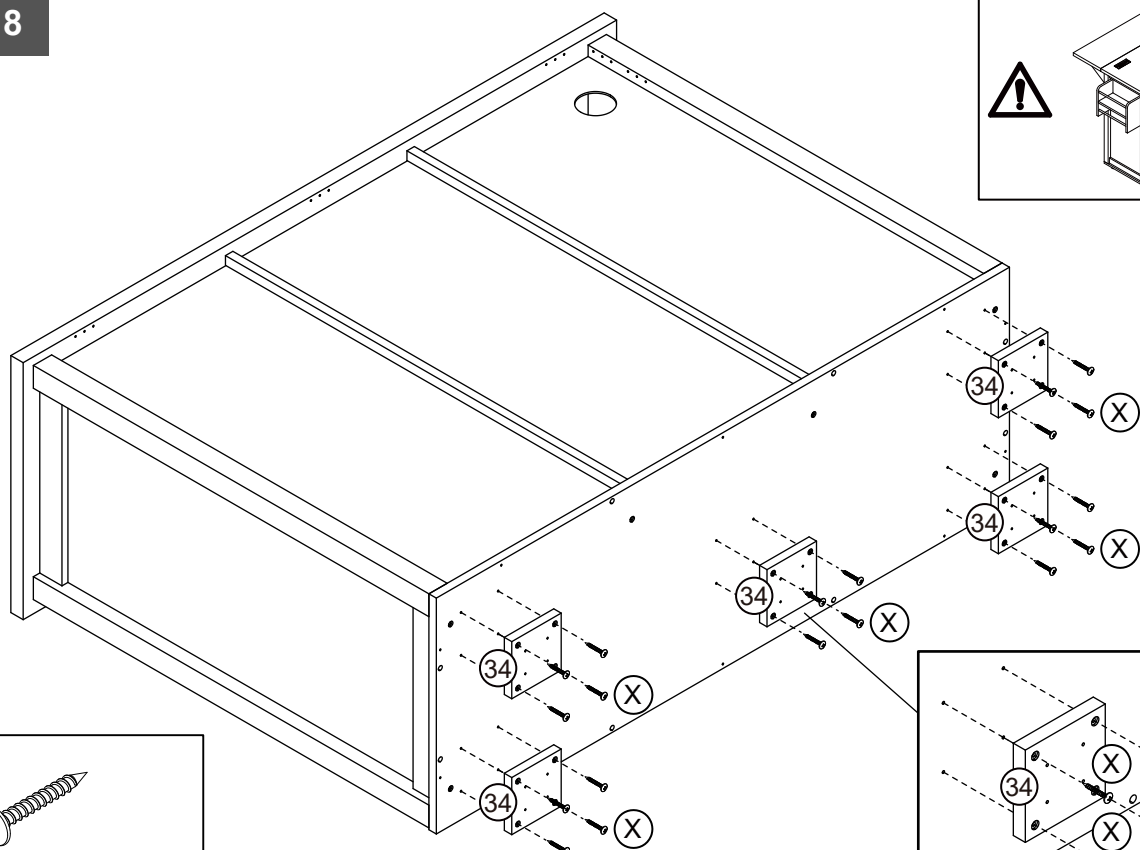

X






4\*25mm Screw x 20

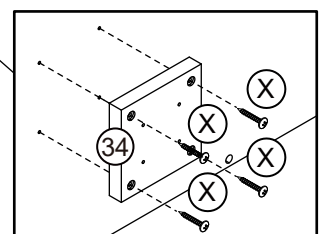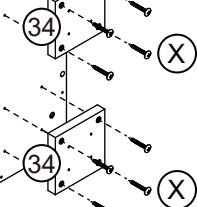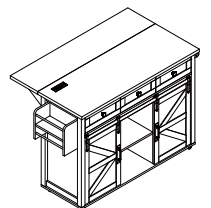

# Assembly Instructions

## Step 19

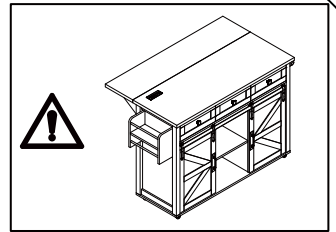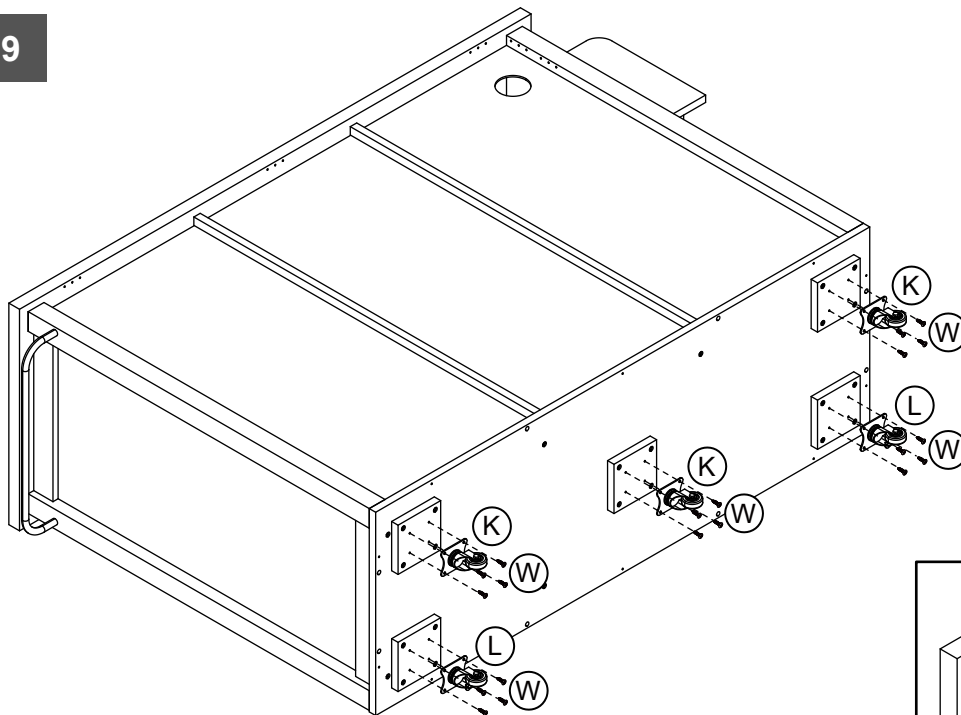


Caster x 3






Locking caster x 2



6\*14mm Screw x 20

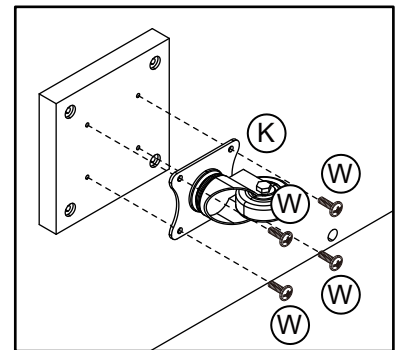


## Step 20

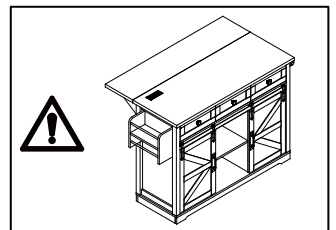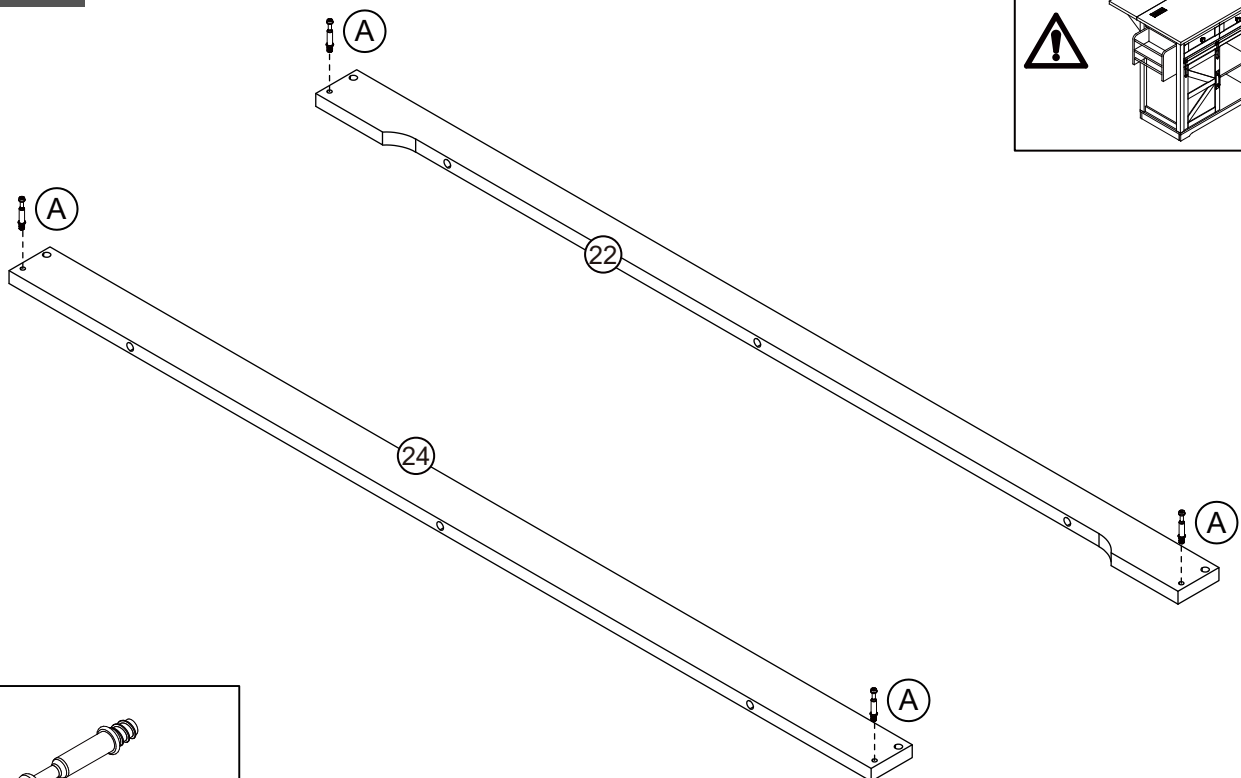

Cam Bolt x 4

# Assembly Instructions

## Step 21

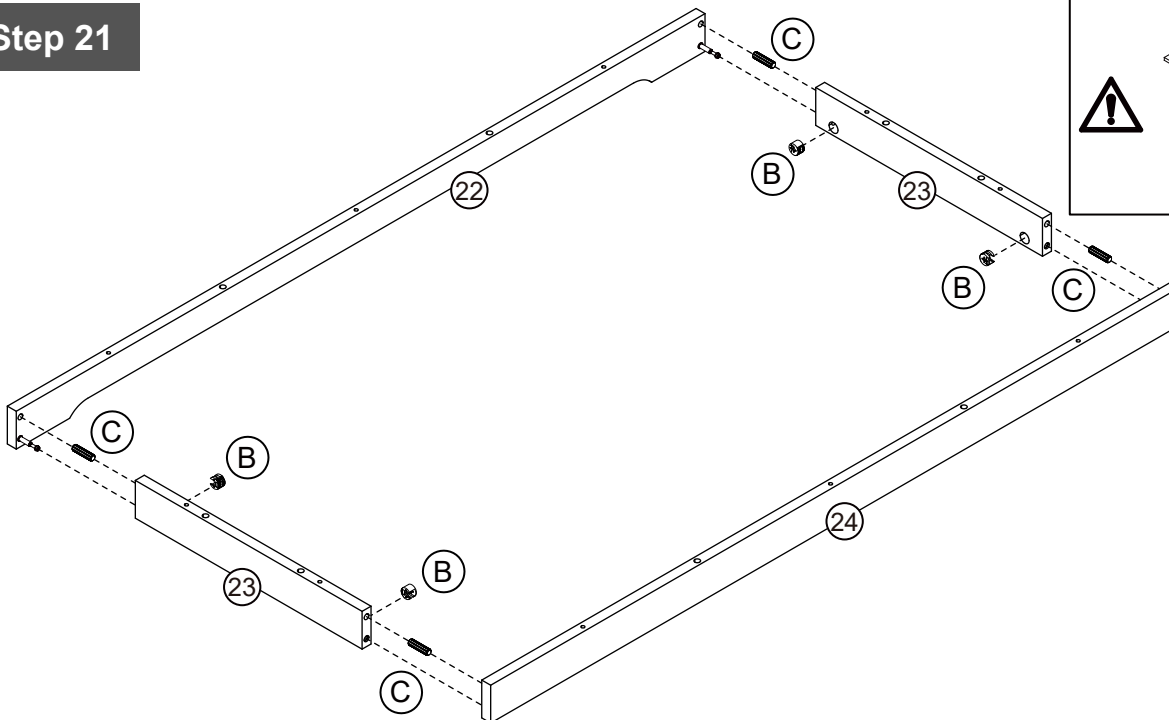

(B)





Cam lock x 4

(C)



6\*30mm Dowel x 4

## Step 22

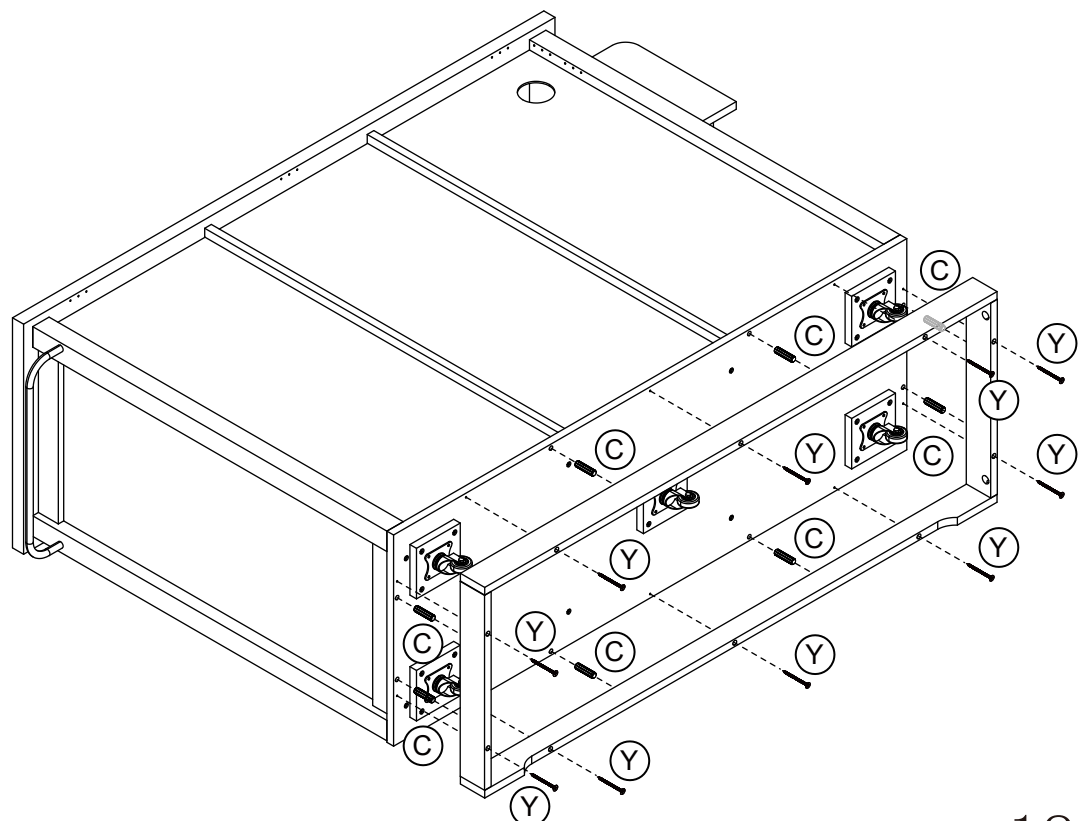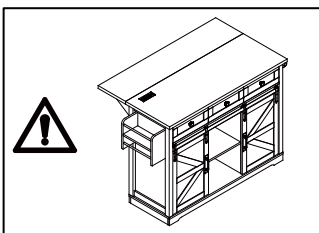


(C)



6\*30mm Dowel x 8


(Y)



4\*35mm Screw x 10

# Assembly Instructions

## Step 23

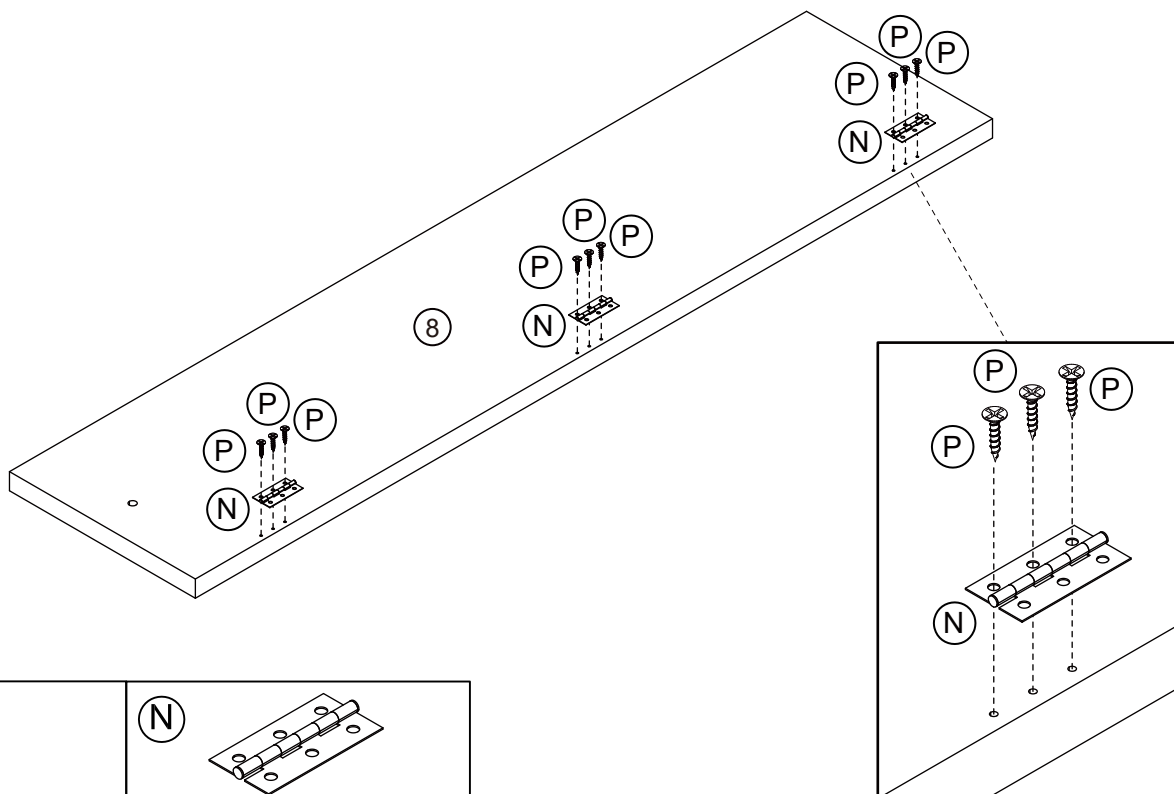


(P)




3.5\*12mm Screw x 9

(N)



hinge x 3

## Step 24

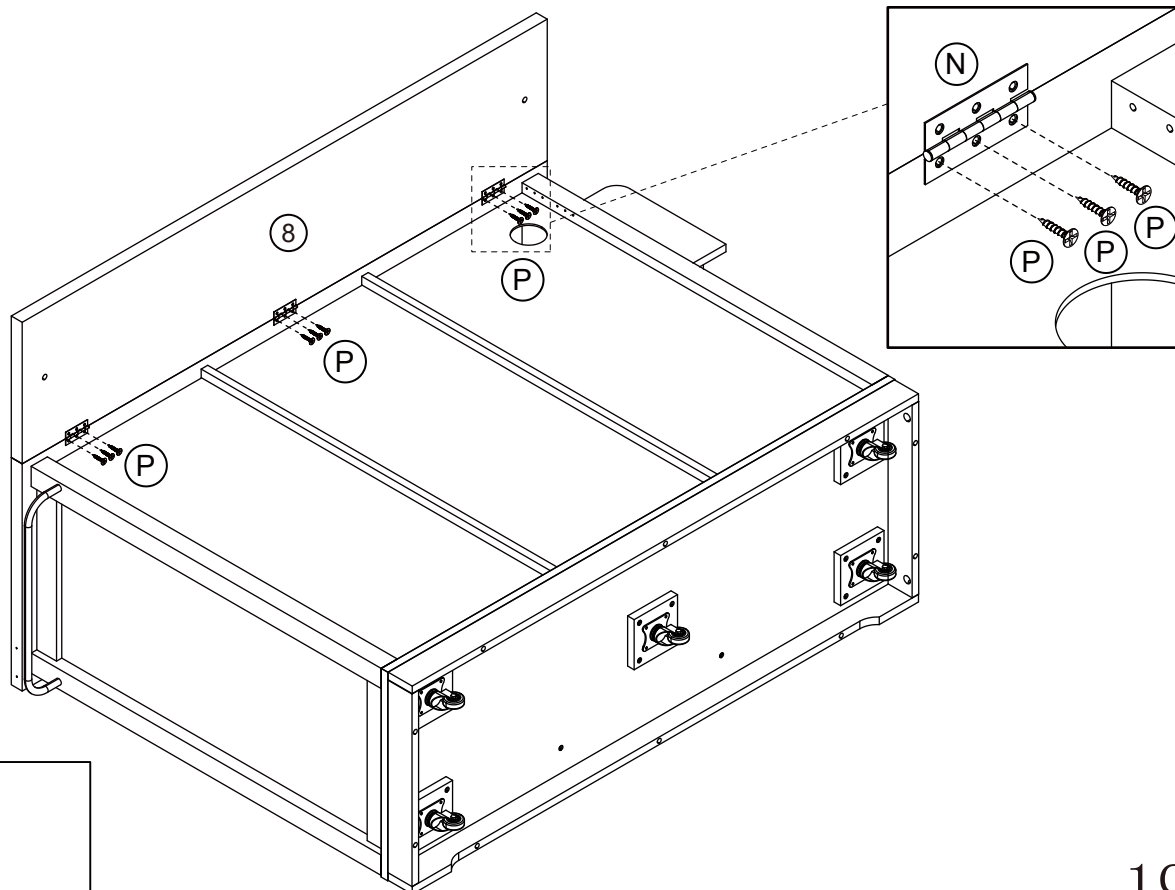

(P)




3.5\*12mm Screw x 9



# Assembly Instructions

## Step 25

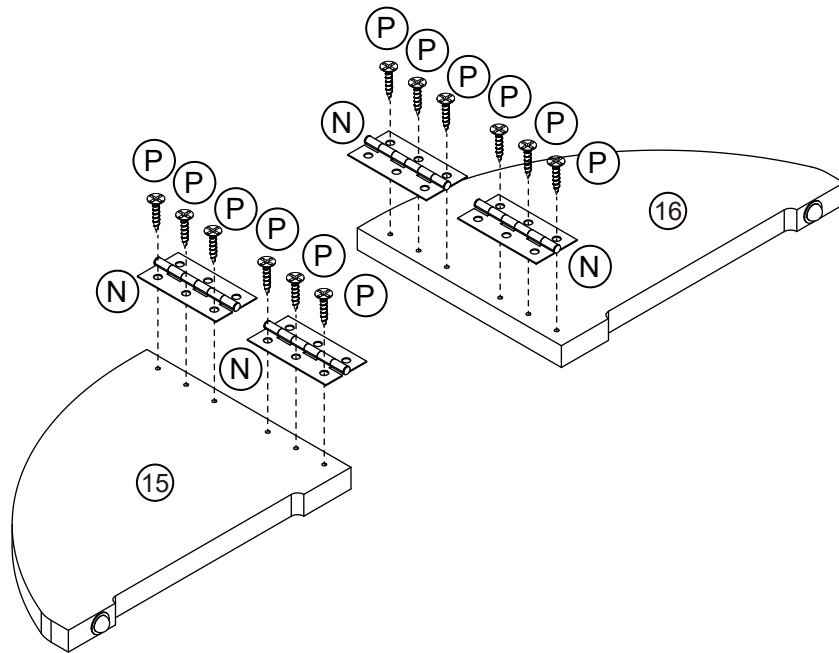


(P)





3.5\*12mm Screw x 12

(N)



hinge x 4

## Step 26

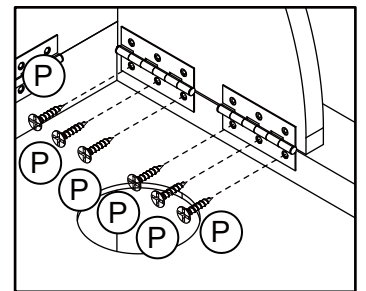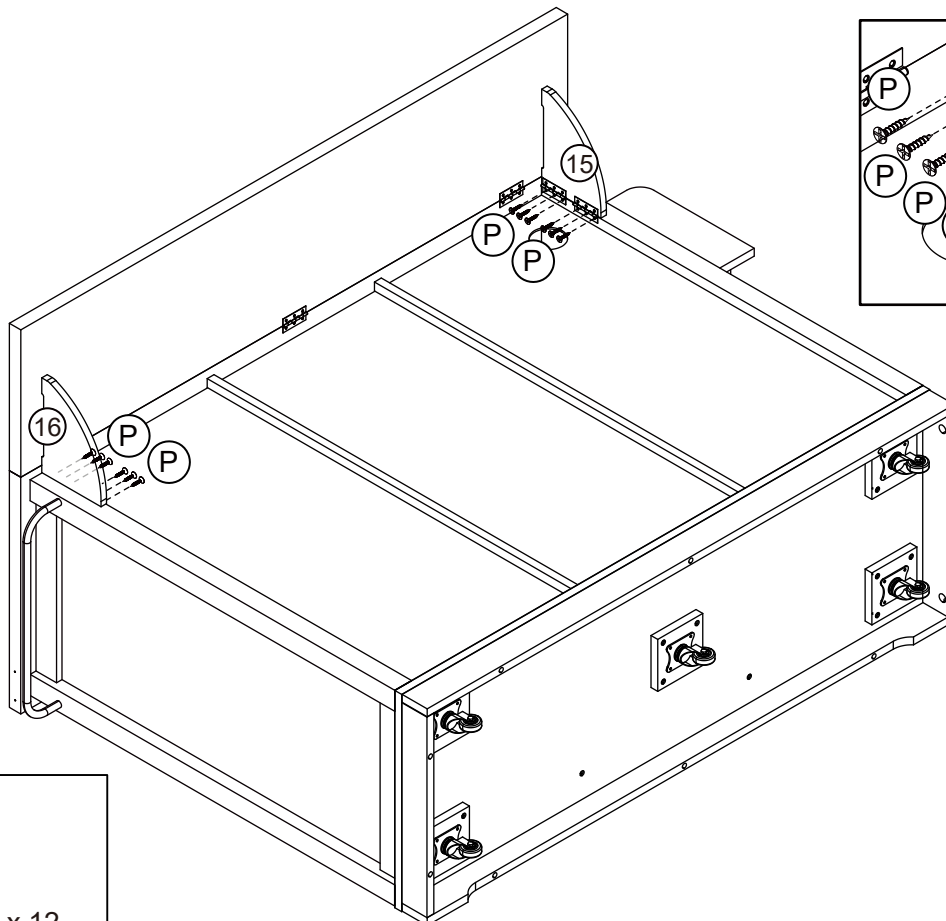




(P)



3.5\*12mm Screw x 12




# Assembly Instructions

## Step 27

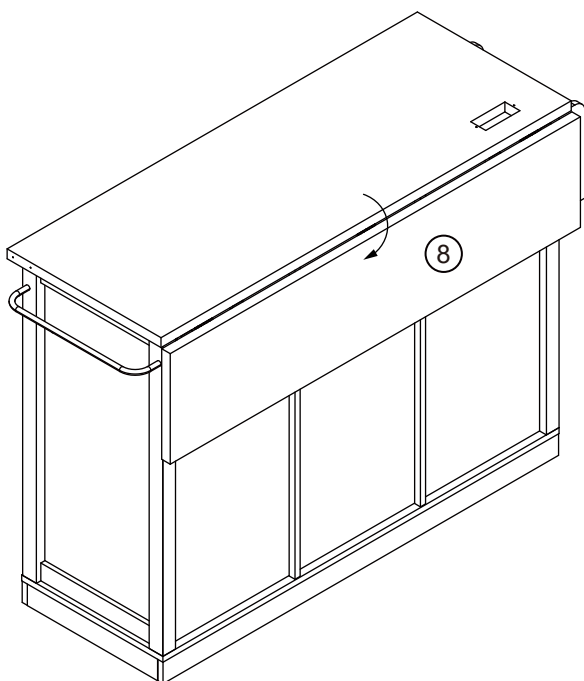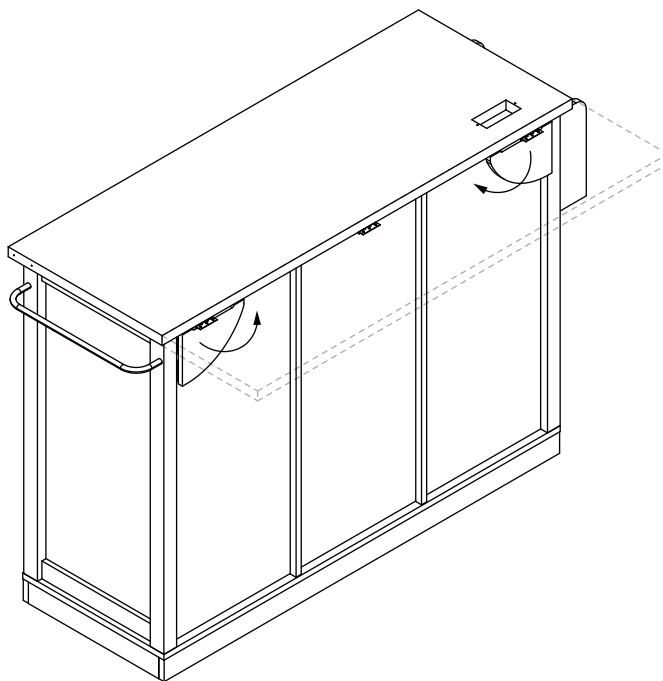
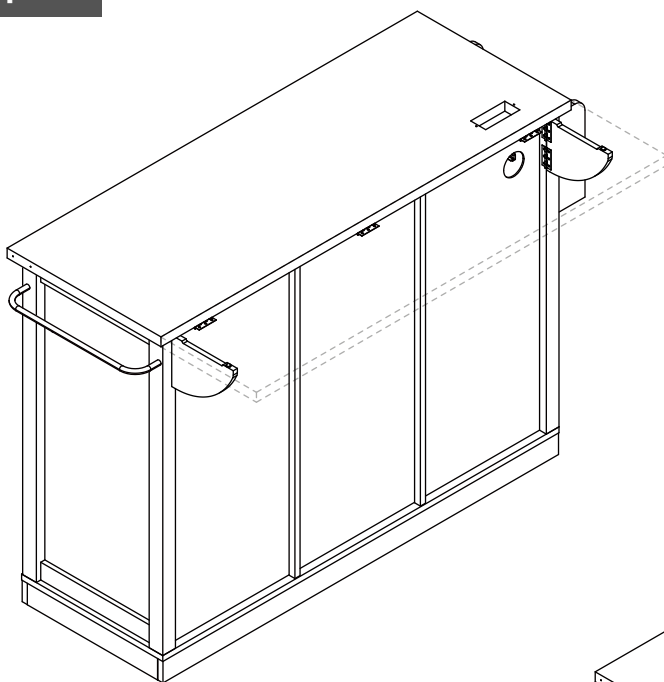


# Assembly Instructions

## Step 28

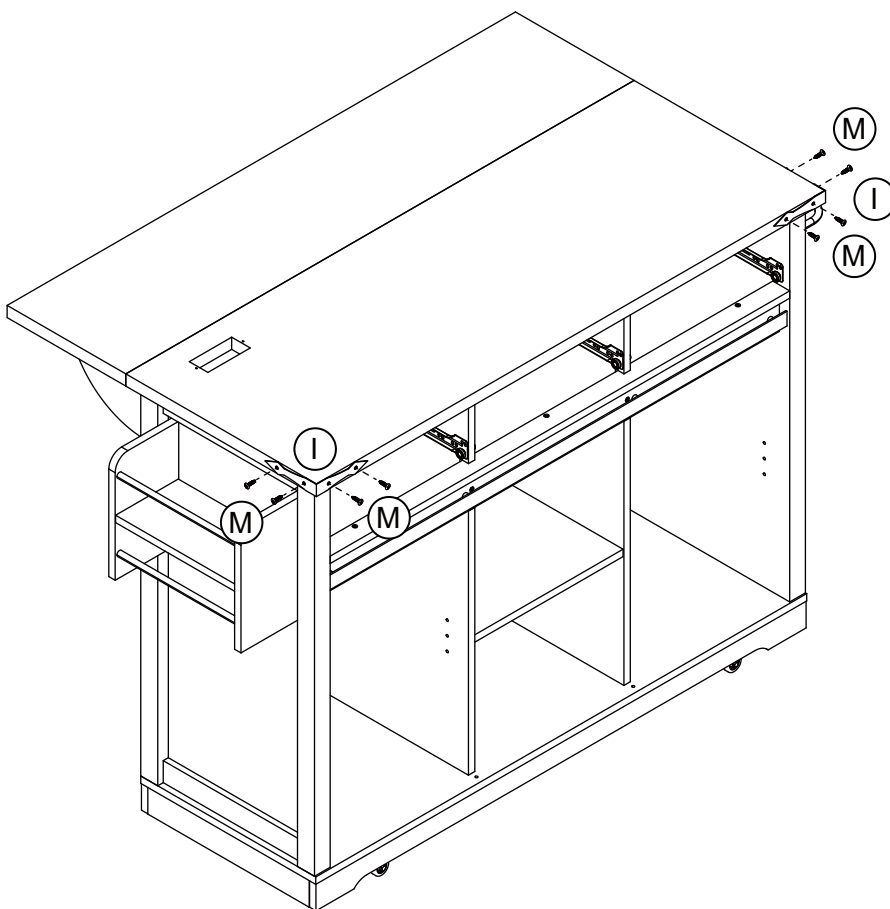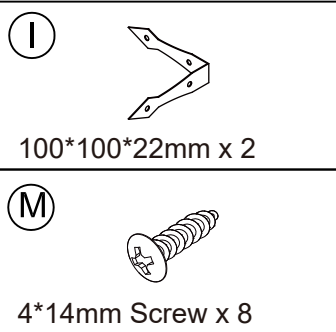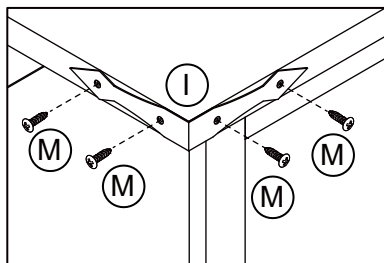


## Step 29

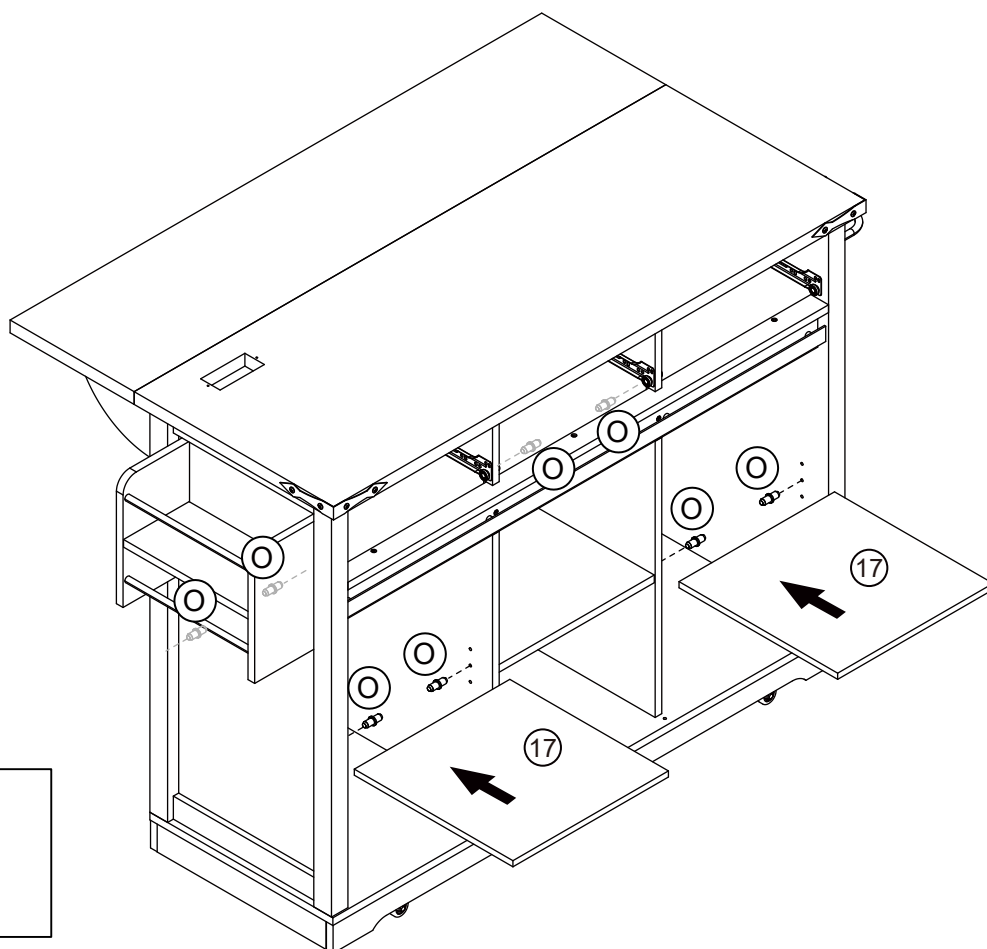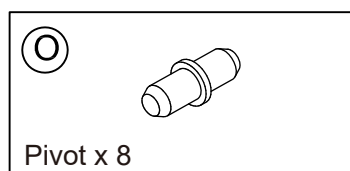

# Assembly Instructions

## Step 30

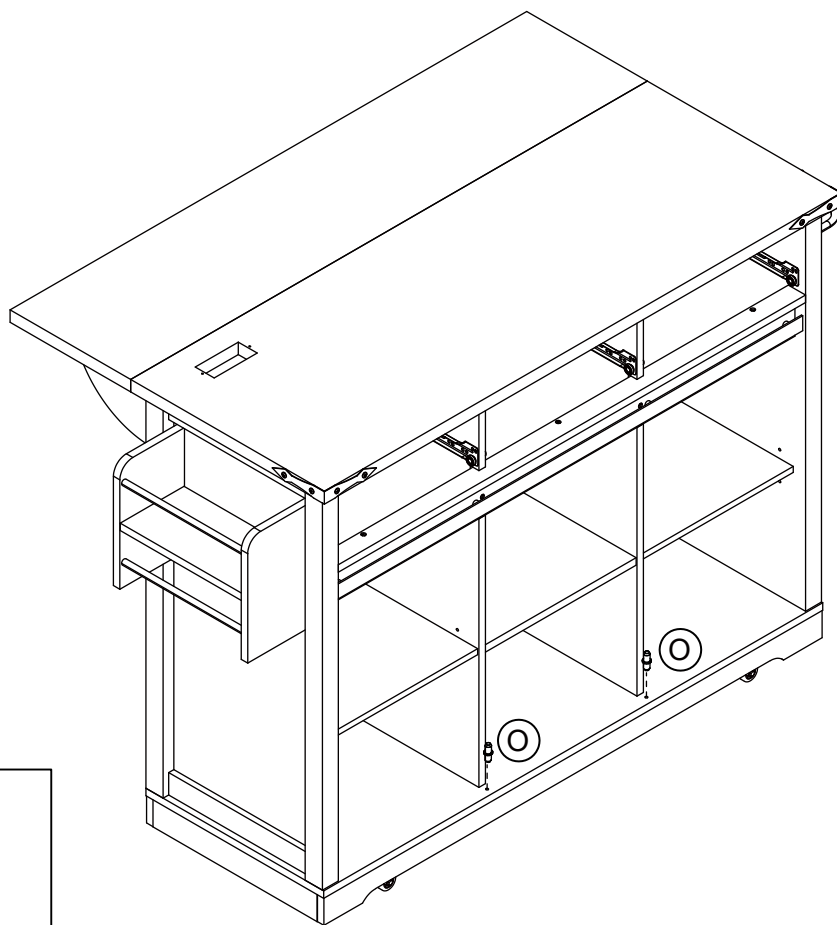


O




Pivot x 2

## Step 31

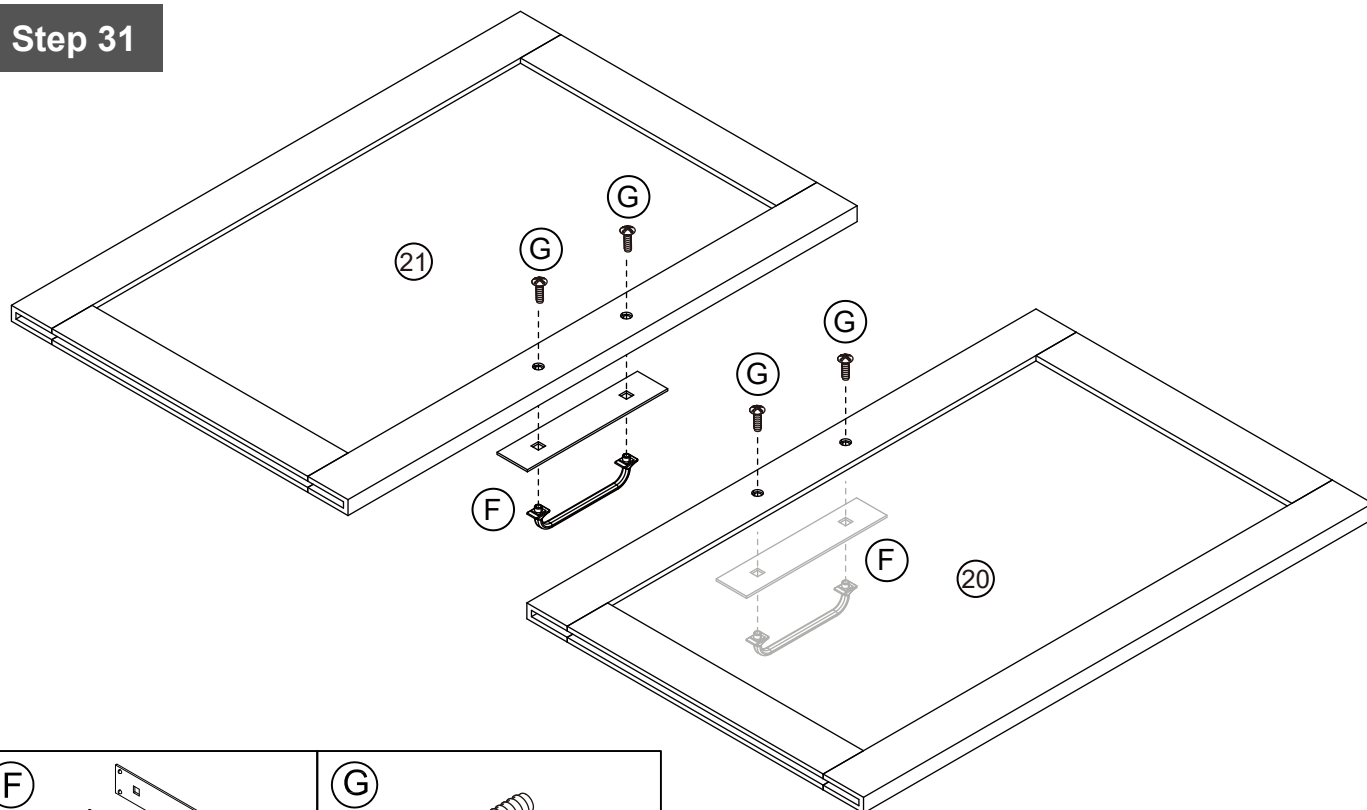

F



Hold hands x 2


G





4\*14mm Screw x 4

# Assembly Instructions

## Step 32

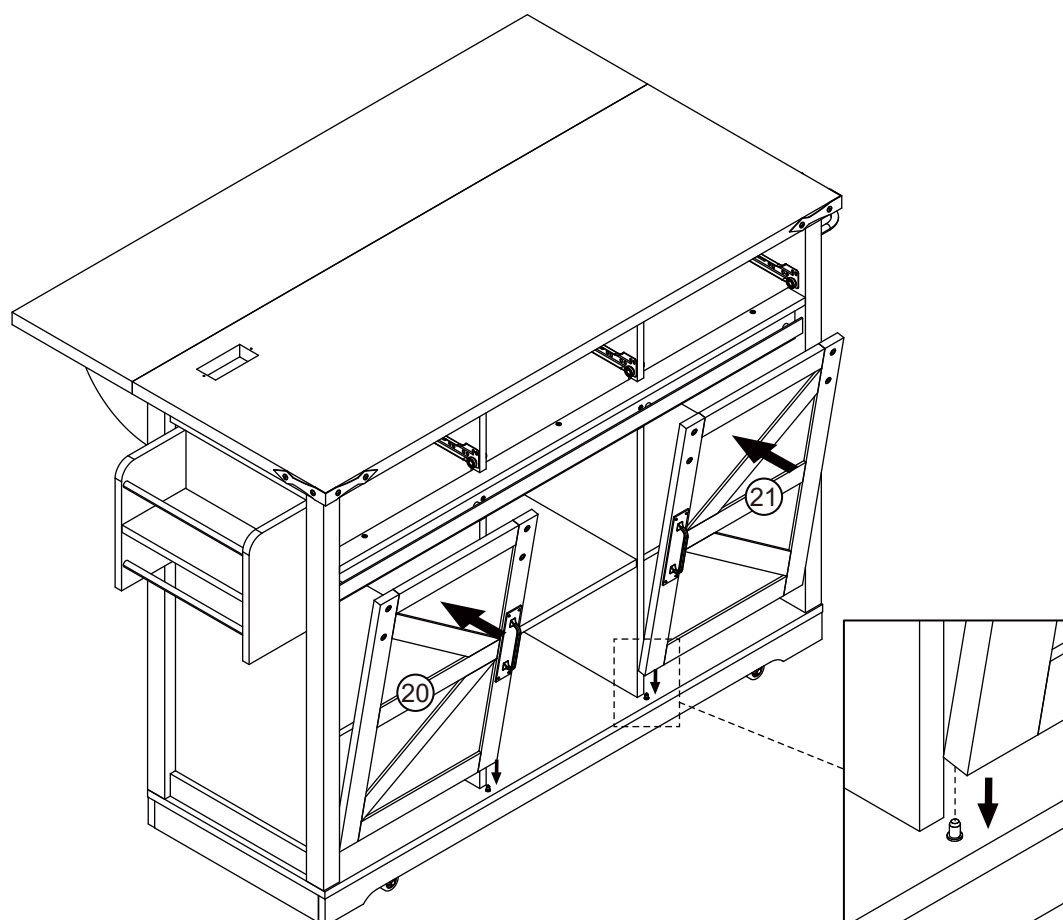


## Step 33

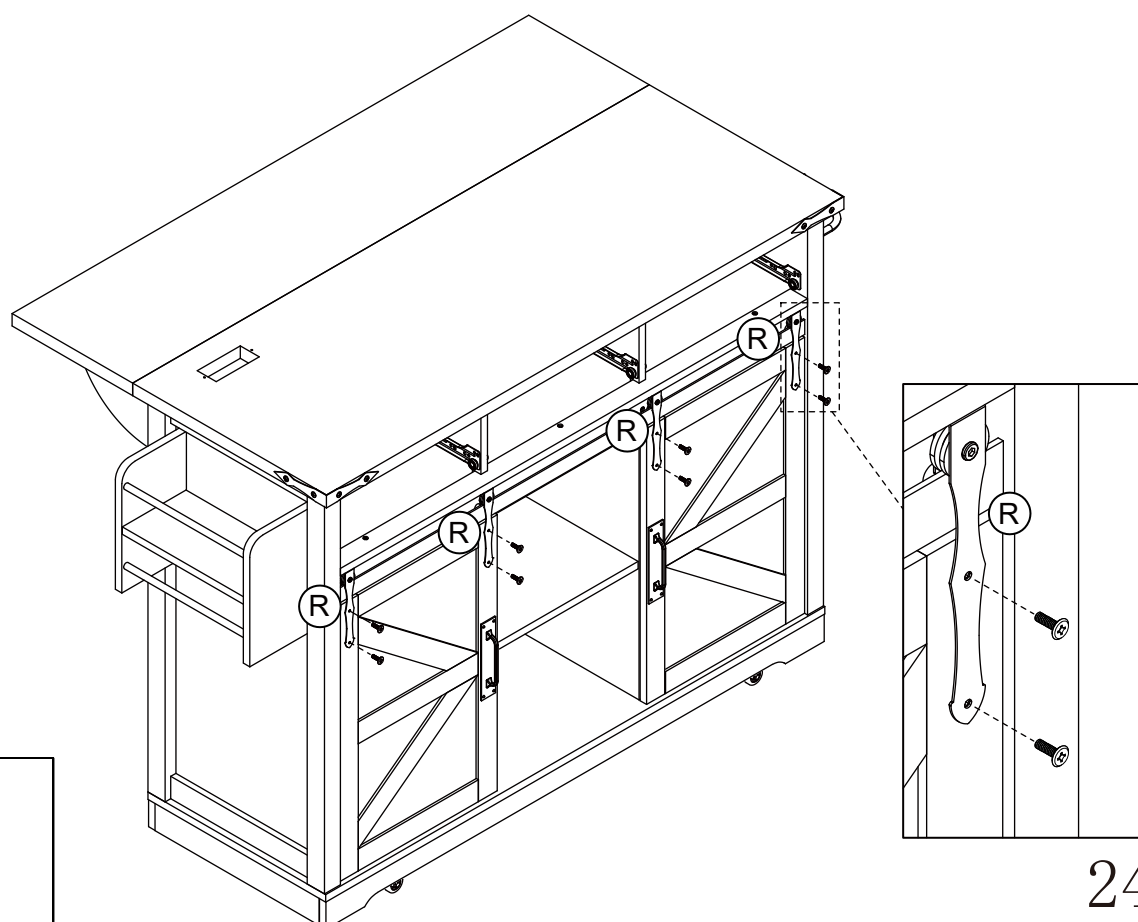

Pulley x 4

# Assembly Instructions

## Step 34

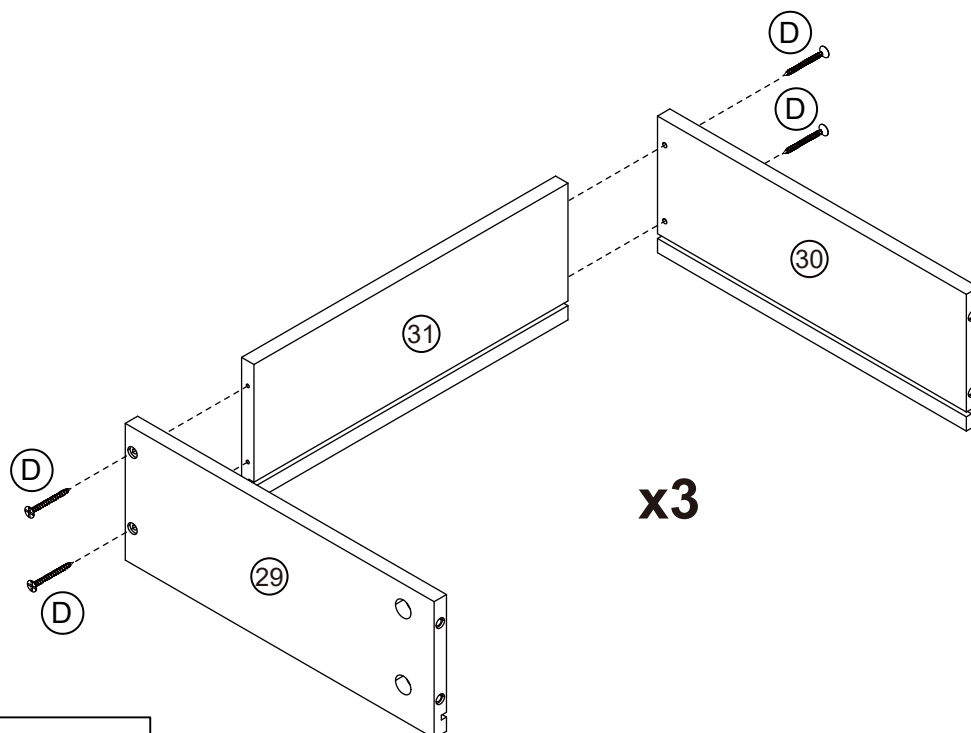


(D)




4\*35mm Screw x 12

## Step 35

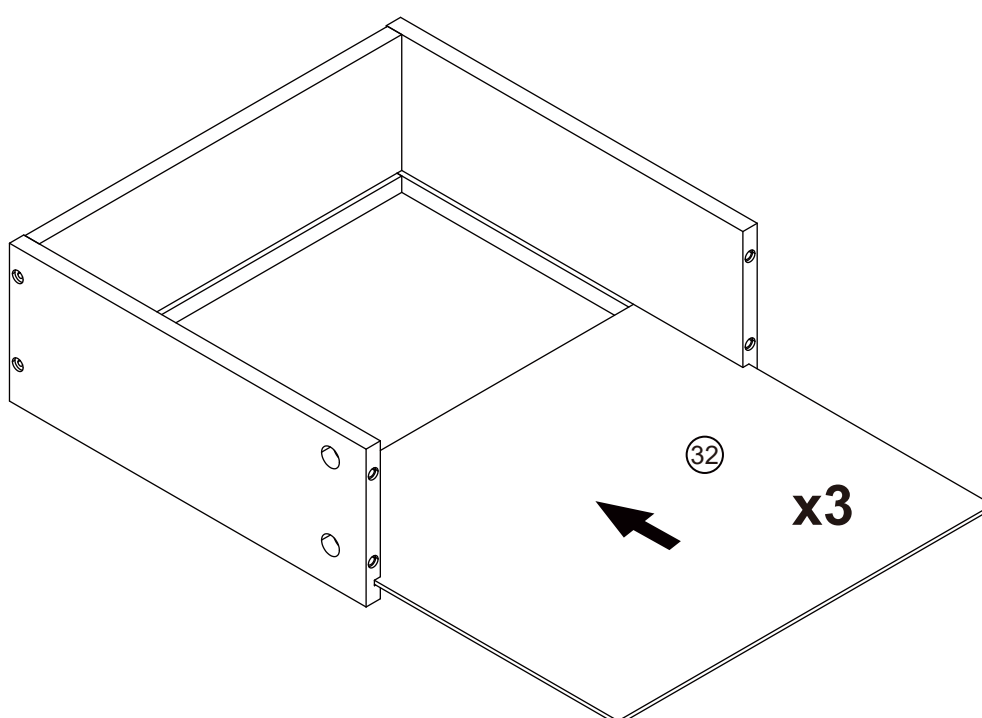


# Assembly Instructions

## Step 36

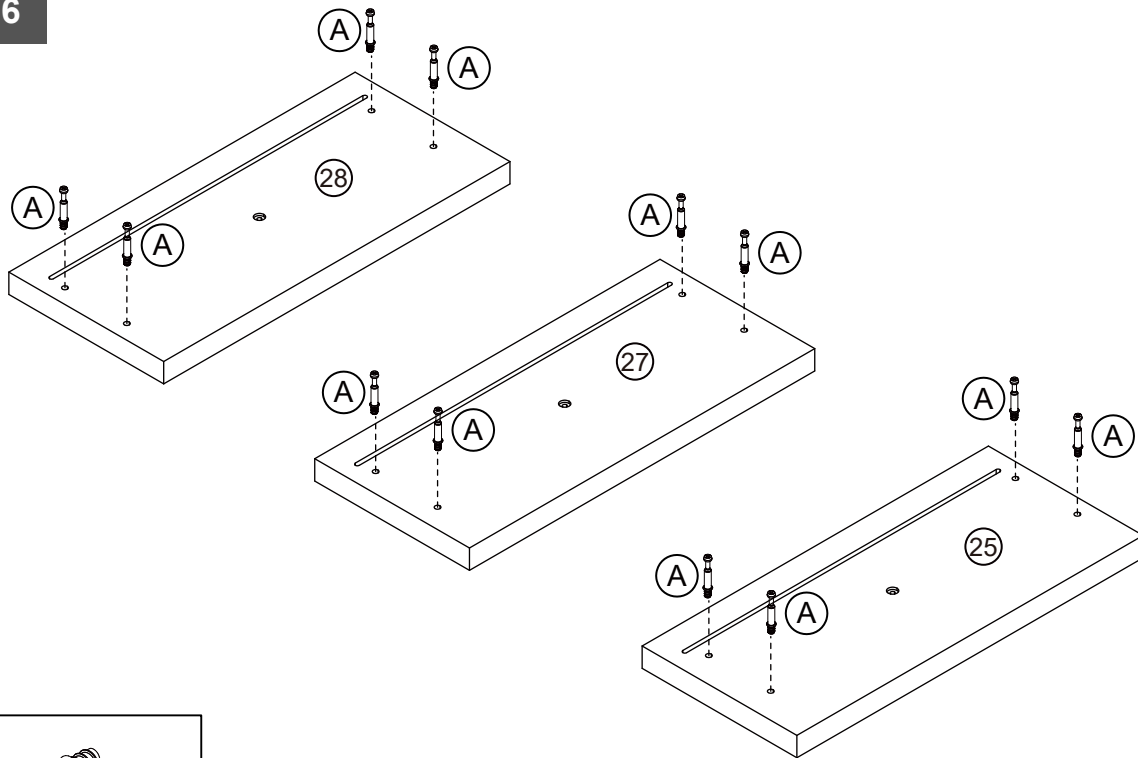


(A)



Cam Bolt x 12

## Step 37

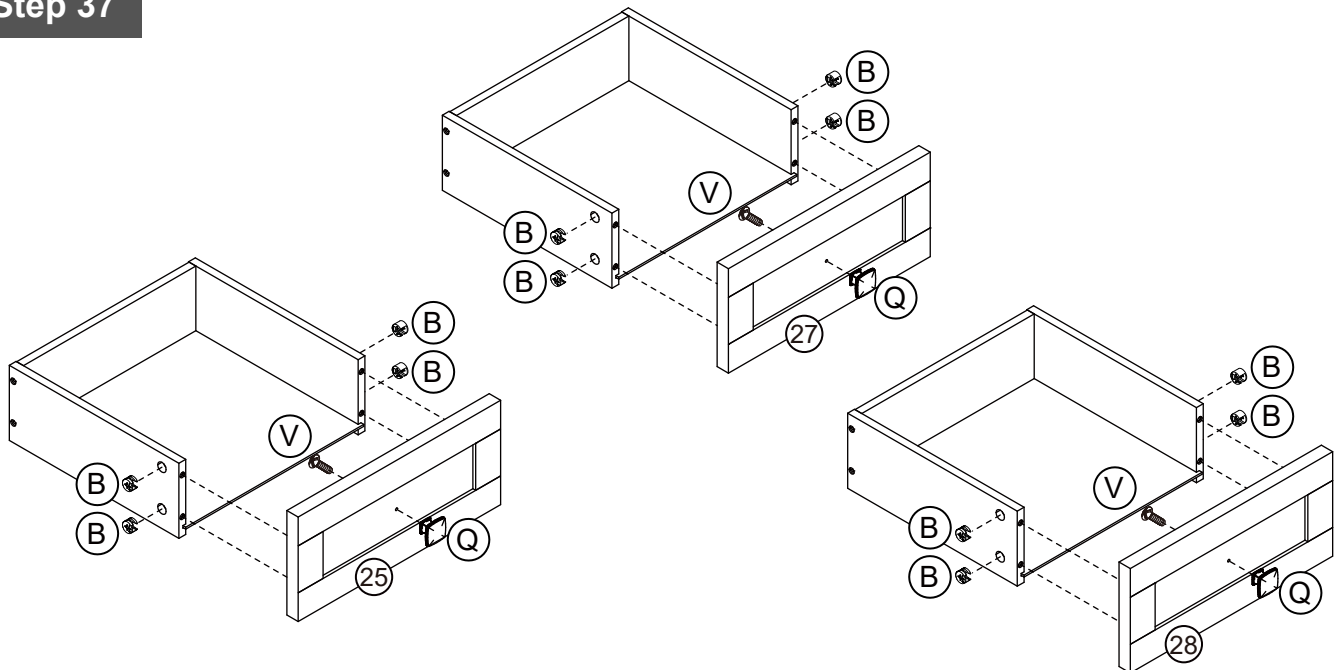

(B)



Cam lock x 12

(V)



4\*16mm Screw x 3


(Q)



Hold hands x 3

# Assembly Instructions

## Step 38

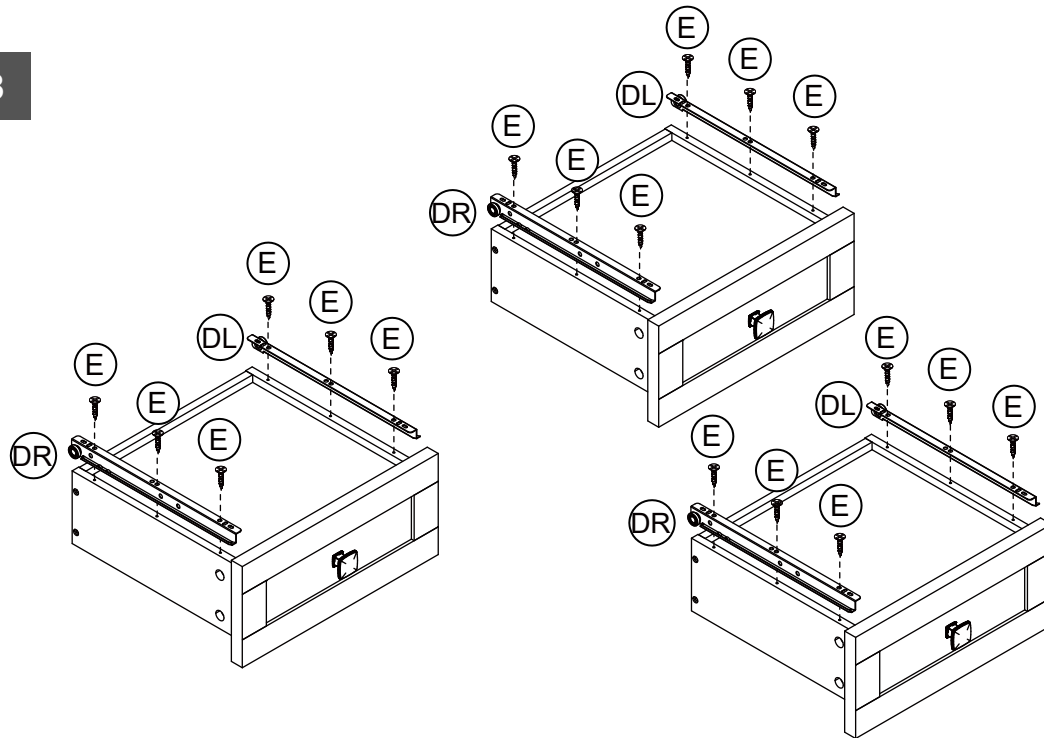


(E)




3\*12mm Screw x 18

(DL)




Runner 300mm x 3

(DR)



Runner 300mm x 3



## Step 39

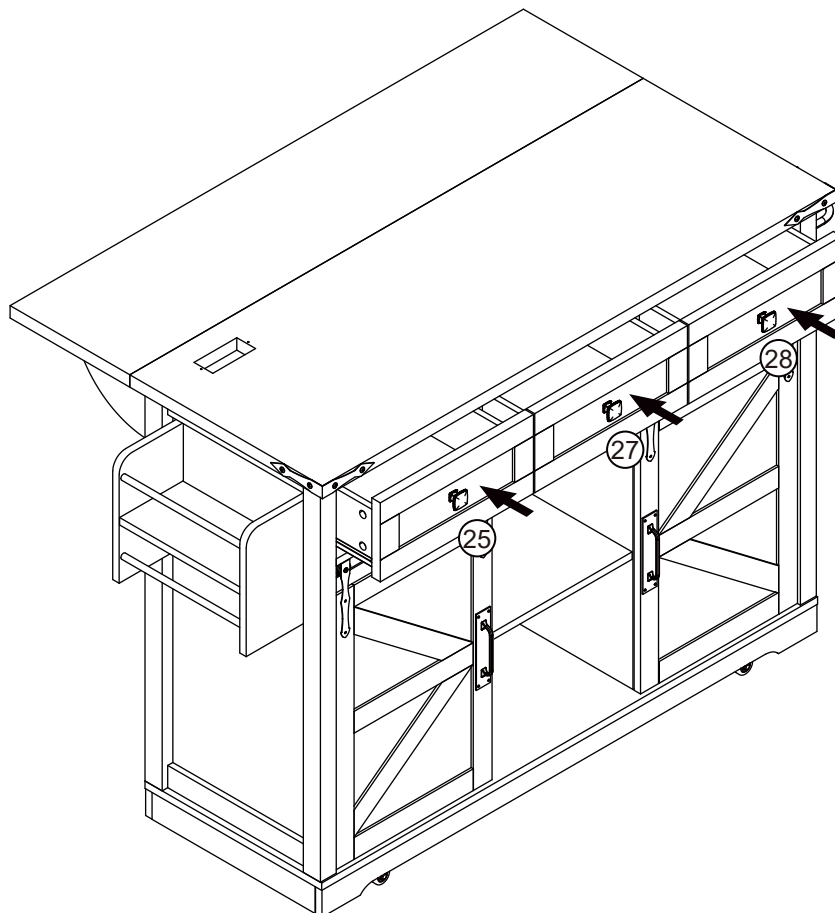



# Assembly Instructions

## Step 40

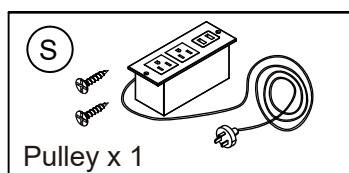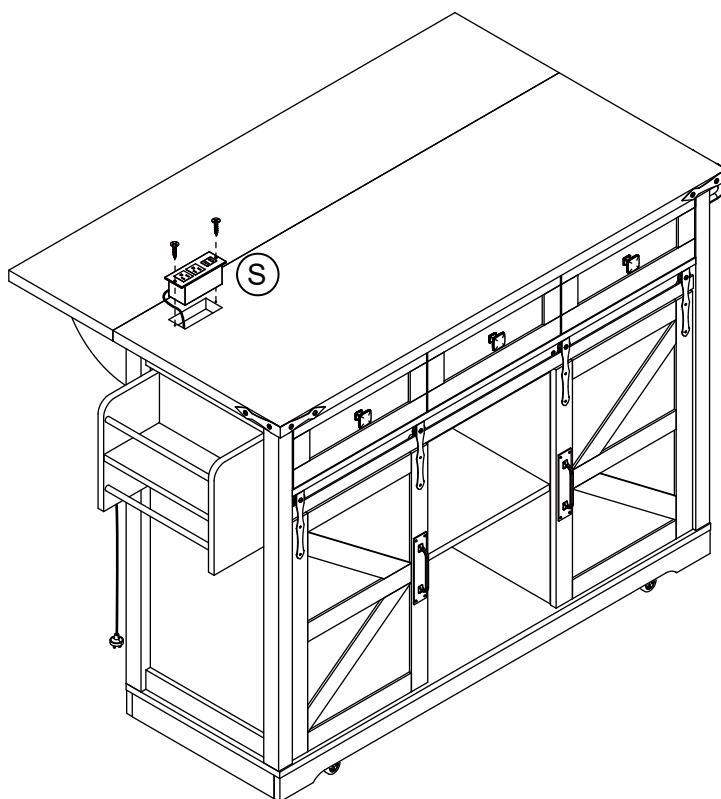

## Step 41

